

Status: 09/2025



**NEW**  
Applicators HQ



Print and  
apply systems  
for industrial operation

**HERMES Q**  
Made in Germany



# cabPROTECT



## Data security in label printing

Modern manufacture sees marking systems work autonomous, interact among each other, with host computers or a plant control unit. Data security is a key issue. The integration of components, their administration and authentication are sensitive tasks demanded from the corporate IT. cab systems developed for printing and applying labels provide proper features by default, fairly protecting your data in a network.



Permissions can be assigned to users and restricted by passwords.



Access to network services (HTTP, FTP, VNC, OPC UA etc.) is possible only for users with authorization. Network services can be switched on or off.



WLAN can be switched on or off. WPA2, WPA2 Enterprise and WPA3 levels of security are supported.



Firmware updates are verified for integrity before installation.



Network protocols can be encrypted using TLS/SSL. To connect securely in a network, a certificate as required is installed in the device ex factory.



Printers in a network can be authorized securely. IEEE 802.1X network standard is supported.



USB slots can be locked and access to external storage media be denied.

All the current cab printing systems are based on the same electronics and firmware.

The printer language is the same, so are interfaces and memory. Any further developed operating system or driver is available immediately on every device. Resets to default settings are PIN-protected.



## Contents

<b>Page 2</b> .....	cabPROTECT
<b>Pages 4 - 13</b> .....	HERMES Q
<b>Pages 14 - 15</b> .....	Software
<b>Pages 16 - 36</b> .....	Applicators
<b>Page 37 - 38</b> .....	Tools for assembly
<b>Pages 39 - 40</b> .....	Floor stands
<b>Pages 42 - 46</b> .....	Delivery program
<b>Page 47</b> .....	cab product overview

# HERMES Q

Printing labels and applying them automatically in production lines

1.1



## The slim one

to print small labels

Label printer	HERMES Q2		
Printable resolution dpi	300	600	
Print speed up to mm/s	300	150	
Print width up to mm	56.9	54.1	
Label roll outside diameters mm	205 / 305		
Label width up to mm	58		

1.2



## The universal one

An industrial bestseller, providing a wide range of accessories

Label printer	HERMES Q4.3	HERMES Q4
Printable resolution dpi	200	300
Print speed up to mm/s	300	300
Print width up to mm	104	108.4
Label roll outside diameters mm	205 / 305	
Label width up to mm	114	

1.3



## The wide one

to print Odette, UCC and GS1 labels in logistics applications

Label printer	HERMES Q6.3	
Printable resolution dpi	200	300
Print speed up to mm/s	250	250
Print width up to mm	168	162.6
Label roll outside diameters mm	205 / 305	
Label width up to mm	174	

## Sample applications



## Label rolls

All units can provide an unwinder for picking up rolls with maximum diameter either 205 mm or 305 mm.








## Directions to which dispense labels

All units can be designed for providing labels either to the left or to the right.



## Orientations of assembly

All the units can be rotated vertically by at most 360° or assembled in horizontal orientation.

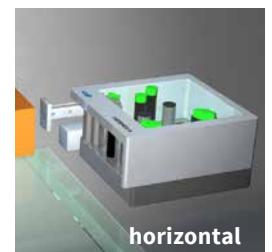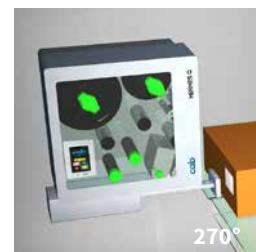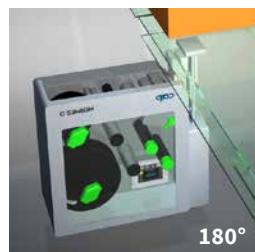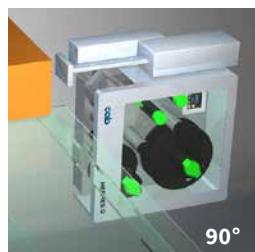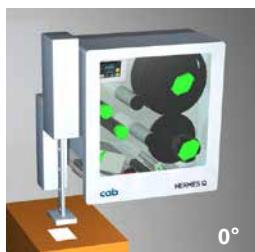

# HERMES Q in detail



## 1 Operation panel

Self-explanatory symbols are on display. The device can thus be operated intuitively and settings be configured easily.

## 2 Ribbon holder

On the basis of three-part tightening axles, ribbons can be replaced easily and quickly.

## 3 Rugged metal chassis

It is made of cast aluminum. All the parts are assembled to it.

## 4 Applicator

It is assembled to hinge pins. It can be pivoted in case of maintenance or if materials have to be replaced.

## 5 Pressing plungers

One is fixed near the chassis wall. The second one is pushed to the label margin, as far as necessary to evoke a good print image.

## 6 Print head

Units of the same width are interchangeable. Replacement requires only few steps.

## 7 Print roller

It can be removed/inserted quickly in cases of cleaning or wear.

## 8 Peel-off plate

Pivoting improves labels be applied to packages.

## 9 Label unwinder

A swing arm and an integral brake enable labels be unwound at constant force.

## 10 Liner rewinder

Subsequent to all the labels been dispensed, the entire liner tape is rewound. On the basis of a three-part tightening axle, a liner tape can be inserted and removed easily.

## 11 Pulling system

A liner tape is clamped between a draw roller and a pinch roller. Labels are dispensed using feed synchronous to the print roller.

## 12 Label sensor

Imprint is precisely set on spot on a label and materials ending detected by a transmissive or a reflective sensor.

## Accurate imprint

The smaller a label, the higher are the demands regarding the accuracy of an imprint. Print offset can be reduced by  $\pm 0.2$  mm using adjustable slip correction.

## Print heads



**Units of the same width are interchangeable.**  
**They are detected by the CPU automatically and calibrated.**  
**The print distance to the locating edge can be adjusted.**

Major data such as the operational performance, maximum operating temperature and heat energy are recorded on the print head. Data can be read at the factory.

**Print heads provided for HERMES Q2, HERMES Q4 - 300, 600 dpi**

- sharp-edge print images
- e.g. when printing small fonts and graphics on typeplates
- e.g. when printing on materials requires high energy needs

**Print heads provided for HERMES Q4.3, HERMES Q6.3 - 200, 300 dpi**  
 persistent; when labeling in rough settings and thermal direct method

## Print rollers



**Two types of materials:**

**Print rollers DR**

providing a synthetic rubber coating  
 They enable highly accurate imprint and are provided by default.

**Print rollers DRS**

providing a silicone coating  
 Product life is extra long, taken a higher print offset into account.

## Interfaces



- ① Slot to insert a **SD memory card**
- ② **2 USB hosts** to connect a service key, USB memory stick, keyboard, barcode scanner, USB WLAN stick, warning light, an external operation panel
- ③ **USB 2.0 Hi-Speed** to connect a PC
- ④ **Ethernet 10/100 Mbit/s**
- ⑤ **RS232C** 1,200 to 230,400 baud /8 bits
- ⑥ **Digital I/O interface**; socket connector SUB-D, 25 pins compliant with IEC/EN 61131-2, types 1+3;  
 All the inputs and outputs are isolated galvanically and protect from reverse polarity. In addition, outputs are short-circuit proof

**PNP inputs**


- Start printing or labeling
- Print first label
- Reprint
- Delete print job
- Label removed
- Stop printing or labeling
- Label feed
- Label rotated by 90° (to be applied by applicator 4214)
- Pause
- Reset

**PNP, NPN outputs**

- Device ready
- Print data available
- Initial / upper end position
- Paper feed ON
- Label in transfer position
- Label application / lower end position
- Pre-warning to a ribbon ending
- Pre-warning to a label web ending
- End of a ribbon and/or a label web
- Collective error

Option:

⑦ **2 port Ethernet switch 10/100 Mbit/s**

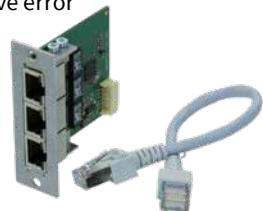

# Operation panel

**Self-explanatory symbols are on display. The device can thus be operated intuitively and settings be configured easily.**


- ① **LED:** Power ON
- ② **Status bar:** data reception, record data stream, pre-warning to a ribbon ending, SD memory card / USB memory stick plugged in, WLAN, Ethernet, USB slave, time
- ③ **Printer status:** ready, pause, number of labels printed in a print job, label in transfer position, awaiting external start signal
- ④ **USB slot** to connect a service key or a memory stick, to transfer data to the IFFS memory
- ⑤ **Operation**

- Printing and applying labels in individual steps
- Jump to menu
- Reprint the latest label
- Interrupt and continue a print job
- Stop and delete all print jobs
- Label feed


**Landscape or portrait display, depending from the orientation of assembly**




Printer rotated by 90°

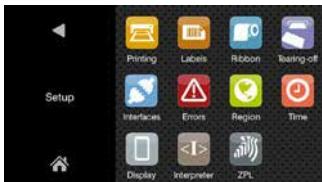

Setup options

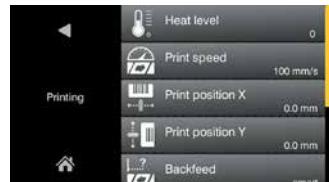

Print parameters

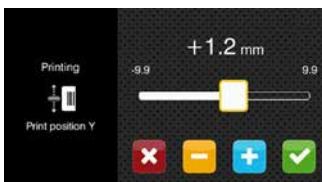

Print offset Y



Print speeds



Video tutorials

## External operation panel

If the operation panel of a printer cannot be accessed, an additional external one can be plugged.

Same functionality as on the printer

Landscape or portrait mode

Operability as desired on the external operation panel or on the printer

Printer connectivity: USB 2.0 Hi-Speed device

- ① **LED:** Power ON
- ② **USB port** to plug a service key or a memory stick, to transfer data to the IFFS memory
- ③ **Connecting USB cable** for power supply  
cab provides specified cables. Lengths are 1.8 m to 16 m.



# Accessories

Accessory products are plugged or screwed to a printer by the customer.

Pos.	Designation	roll Ø	205	305	1.1	1.2	1.3
			HERMES Q2	HERMES Q4.3	HERMES Q4	HERMES Q6.3	
2.1	SD memory card		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.2	USB memory stick		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.3	USB WLAN stick		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.4	USB WLAN stick including a rod antenna		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.6	Product sensor, 3 pins		●	●	-	<input type="checkbox"/>	<input type="checkbox"/>
2.7	Product sensor, 25 pins		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.8	I/O interface connector SUB-D, 25 pins		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.9	Warning light		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.10	External operation panel		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Connecting USB cable		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.11	Label selection - I/O box		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.12	Hand switch TR2		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.13	Foot switch		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.14	Connecting RS232 C cable		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.15	Scanner CC200		●	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

2.1		<b>SD memory card</b>					
2.2		<b>USB memory stick</b>					
2.3		<b>USB WLAN stick</b> 2.4 GHz 802.11b/g/n hotspot or infrastructure mode					
2.4		<b>USB WLAN stick including a rod antenna</b> to extend the range of operation 2.4 GHz 802.11b/g/n + 5 GHz 802.11a/n/ac hotspot or infrastructure mode					
2.6		<b>Product sensor, 3 pins</b> to be attached to a front side applicator, a vacuum belt applicator or an air jet box. Labels are triggered to be applied as soon as a product has been detached, e.g. on a conveyor belt.					
2.7		<b>Product sensor, 25 pins</b> Labels are triggered to be applied as soon as a product has been detached, e.g. on a conveyor belt.					
2.8		<b>I/O interface connector SUB-D, 25 pins</b> All control signals can be attached to the I/O interface using clamping screws.					
2.9		<b>Warning light</b> In addition to the information indicated on the display of a printer, states are signalled. Red Collective error Yellow Pre-warning to a label web or a ribbon ending Green Device ready USB cable (1 m) to connect to HERMES Q Assembly materials are provided for vertical printer installation only. ① Chassis assembly ② Bracket assembly					
2.10		<b>External operation panel</b> If the operation panel of a printer cannot be accessed, an additional external one can be plugged. Same functionality as on the printer Landscape or portrait mode Operability as desired on the external operation panel or on the printer					
2.11		Printer connectivity: USB 2.0 Hi-Speed device cab provides specified <b>connecting USB cables</b> for power supply. Lengths are 1.8 m to 16 m.					
2.12		<b>Label selection - I/O box</b> A maximum of 16 different labels can be selected from a memory card by a master control unit, e.g. PLC.					
2.13		<b>Hand switch TR2</b> to be attached to the I/O interface					
2.14		<b>Foot switch</b> to be attached to the I/O interface					
2.15		<b>Connecting RS232 C cable</b> 9/9 pins, 3 m					
		<b>Scanner CC200</b> provided upon request					

# Options

are parts or units to perform special functions.  
They are assembled to a printer in addition to or instead of standards.

If order implies options be assembled ex factory, the part numbers of such printers and options are added by .250.  
Options delivered separately are added by .001.

Pos.	Designation	roll Ø	205	305	HERMES Q2	HERMES Q4.3	HERMES Q4	HERMES Q6.3	.250	.001	.486	.488
3.1	Automatic ribbon saving		●	●	-	□	□	□	●	-	-	-
3.2	UHF RFID module RS		●	●	-	□	□	□	●	-	●	●
3.3	UHF RFID module HS		●	●	-	□	□	□	●	-	-	-
3.4/3.5	Label unwinder K40		●	●	□	□	□	□	●	●	-	-
3.6	Adapters 40/50 and 76/100		●	●	□	□	□	□	●	●	-	-
3.7	Spacers		●	-	□	□	□	-	●	●	-	-
3.8	Margin stop 10		●	-	□	□	□	□	●	●	-	-
3.9	Cover		●	-	□	□	□	□	●	●	-	-
3.10	Print head pressure system, reduced force		●	●	□	□	-	□	●	●	-	-
3.11	Extended peel-off plate (+10 mm)		●	●	□	□	□	□	●	●	-	-
3.12	Print roller DRS		●	●	□	□	□	□	●	●	-	-
3.13	Antistatic brush		●	●	□	□	□	-	●	●	-	-
3.14	Draw roller ZS		●	●	□	□	□	□	●	●	-	-
3.15	Interface for plugging an external label sensor		●	●	□	□	□	□	●	●	-	-
3.16	2 port Ethernet switch 10/100 Mbit/s		●	●	□	□	□	□	●	●	-	-
	Label sensor, modified		●	●	□	-	-	-	●	●	-	-



assembly  
ex factory only

## Automatic ribbon saving

Use is recommended in cases of at least 60 mm unprinted area on a label. While labels are fed, the print head is lifted and the ribbon stopped, resulting in less material consumption.



assembly  
to  
a printer ex factory  
excludes automatic  
ribbon saving

## UHF RFID module

Read/write antennas are assembled directly to a print head or a feeding unit. Using a 4214 applicator enables defective labels to be ejected.



See information on [www.cab.de/en/rfid](http://www.cab.de/en/rfid)



## Label unwinder K40

to process label rolls having a core diameter of 40 mm

3.4



## Adapter 40/50

to pick up label rolls having a core diameter of 50 mm and minimum widths of 20 mm. One adapter is sufficient if material width does not exceed 50 mm.



## Adapter 76/100

to pick up label rolls having a core diameter of 100 mm and minimum widths of 20 mm. One adapter is sufficient if material width does not exceed 50 mm.



## Spacers

to process narrow labels provided on liners ≤ 20 mm wide, wound on a roll or a reel.

Ribbon protruding on both sides prevents wrinkling. The label guidance is therefore offset by 7 mm from the middle wall with spacers.

A modified label sensor is included on delivery.

Reel plate wall thickness 1 - 2 mm



## Margin stop 10

to guide narrow labels provided on a liner 10 - 24 mm wide, wound on a roll (no reels) having a core diameter of 76 mm.

Operate only with a spacer

# Options

3.8



## Cover

to prevent from contamination and contact  
 Maximum outside diameter for label rolls is 205 mm  
 Assembly in vertical orientation, rotated by  $\pm 90^\circ$  or horizontally  
 Depth of a pad immersing Dim. F

	Dimension F mm		
	Standard	Optional	upon request
HERMES Q2	60	100	up to 120
HERMES Q4/Q4.3	60	100	up to 120
HERMES Q6	25	-	up to 120

3.9



## Print head pressure system, reduced force

Thermal direct printing requires less pressure on a print head.  
 Reduced force results in a decrease of wear. Product life extends.  
 Thermal direct printing only

3.10



## Extended peel-off plate (+10 mm)

Recommended  
 - if labels are picked up by a robotic arm,  
 - if readable area is required for scanning,  
 - when installing an antistatic brush


3.11



## Print roller DRS

Silicone coating enables an extra long product life,  
 taken a higher print offset into account

3.12

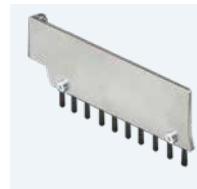

## Antistatic brush

Electrostatic charge is reduced when plastic labels  
 are printed and peeled off.

Operate only with an extended peel-off plate.

3.13



## Draw roller ZS

Made of steel, to avoid tension on a liner tape:  
 - if label height exceeds 150 mm  
 - when peeling off without backfeed  
 - if thick liner materials are processed  
 - when applying labels using a demand module 5114/16

3.14



## Interface for plugging an external label sensor

M12 plug, 5 pins, a-coded  
 Plug-compatible with CEON and other sensors based on  
 PNP and 24 V

3.15



## 2 port Ethernet switch 10/100 Mbit/s

to connect another terminal device in a joint network.  
 Signals are looped through.

# Technical data

● typical ■ standard □ option

Label printer		type	HERMES Q2		HERMES Q4.3		HERMES Q4		HERMES Q6.3									
Printing method	Thermal transfer	●	●	●	●	●	●	●	●	●								
	Thermal direct	-	-	●	●	-	-	●	●	●								
Printable resolution	dpi	300	600	200	300	300	600	200	300									
Print speed	up to mm/s	300	150	300	300	300	150	250	250									
Print width	up to mm	56.9	54.1	104	108.4	105.7	105.7	168	162.6									
Print length	up to mm	12,000	3,000	13,500	6,000	6,000	1,500	9,000	4,000									
Direction to which dispense labels							L = to the left, R = to the right											
Print distance to the locating edge	mm	1	1	1	1	1	1	1	1	1								
	incl. automatic ribbon saving L / R mm	-	-	2.2 / 1.6	0 / -0.7	1 / 1	1 / 1	0.2 / 0.2	2.9 / 2.9									
<b>UHF RFID</b>																		
UHF RFID module		-	-	□	□	□	□	□	□	□								
<b>Materials</b>																		
Labels			paper, PET, PE, PP, PI, PVC, PU, acrylate, Tyvec															
		on a roll	●	●	●	●	●	●	●	●								
		on a reel	●	-	-	-	-	-	-	-								
Labels <sup>1)</sup>	Width	mm	4 - 58	10 - 114		10 - 114		46 - 174										
	Height	from mm	3	4		4		6										
	Thickness	up to mm	0.60	0.60		0.60		0.60										
Liner tape	Width if operating a roll	mm	24 - 62	24 - 118		24 - 118		50 - 178										
	Width <sup>2)</sup> if operating a reel or a roll	mm	10 - 24	-		10 - 24		-										
Roll unwinder	Thickness	mm	0.03 - 0.08	0.03 - 0.08		0.03 - 0.08		0.03 - 0.08										
	Outside roll diameter	up to mm	205 / 305	205 / 305		205 / 305		205 / 305										
	reel diameter	up to mm	205	-		-		-										
	Core diameter	mm		76		76		76										
Roll rewinder	Winding			outside or inside														
	Outside diameter	up to mm		155 / 205		155 / 205		155 / 205										
Ribbon <sup>3)</sup>	Core diameter	mm		76		76		76										
	Ink side			outside or inside														
	Roll diameter	up to mm		90		90		90										
	Core diameter	mm		25.4		25.4		25.4										
	Length	up to m		600		600		600										
Width		mm	25 - 67	25 - 114		25 - 114		50 - 170										
Automatic ribbon saving			-	□		□		□										
<b>Printer dimensions and weights</b>																		
Width		mm	207	260		260		320										
Height	roll diameters 205 / 305	mm		400 / 430		400 / 430		400 / 500										
Depth	roll diameters 205 / 305	mm		400 / 500		400 / 500		400 / 500										
Weight	roll diameters 205 / 305	approx. kg	15 / 16	16 / 17		16 / 17		20										
<b>Label sensor indicating positions</b>																		
Transmissive sensor		detecting	labels, punch marks or print marks, as well as materials ending															
Reflective sensor bottom reflex		detecting	print marks on non-transparent liners, as well as materials ending															
Sensor distance to the locating edge	standard	mm	2 - 12	2 - 60		2 - 60		2 - 60										
	modified	mm	2 - 26															
Material passage		mm		2		2		2										
<b>Electronics</b>																		
32-bit processor		MHz		800		800		800										
RAM		MB		256		256		256										
IFFS memory		MB		50		50		50										
Slot to insert a memory card (SDHC, SDXC)				■		■		■										
Battery to display date and real time				■		■		■										
Data (e.g. serial numbering) preserved if power turns off				■		■		■										
<b>Interfaces</b>																		
RS232C 1,200 to 230,400 baud / 8 bits				■		■		■										
USB 2.0 Hi-Speed to connect a PC				■		■		■										
Ethernet 10/100 Mbit/s				LPD, RawIP printing, SOAP web service, OPC UA, WebDAV DHCP, HTTP/HTTPS, FTP/FTPS, TIME, NTP, Zeroconf, SNMP, SMTP, VNC														
2 USB hosts on the control panel, 2 USB hosts on the back of a unit				Service key, USB stick, USB WLAN stick, USB WLAN stick including a rod antenna, keyboard, barcode scanner, warning light, external control panel														
USB host 24 VDC, to connect a peripheral device				■		■		■										
Digital I/O interface, 10 inputs / 11 outputs				■		■		■										
Interface for plugging an external label sensor				□		□		□										
2 port Ethernet switch 10/100 Mbit/s				□		□		□										

<sup>1)</sup> Limitations can occur when processing small labels, thin materials or materials using a strong adhesive. Critical applications need testing.

<sup>2)</sup> Spacers attached to the label unwinder and the unit rewinding the liner tape help feeding the ribbon centered above the labels.

<sup>3)</sup> The ribbon must correspond at least to the width of the liner tape.

# Technical data

standard  option

Operating data			
Voltage		100-240 VAC, 50/60 Hz, PFC	
Power consumption		standby <10 W / typical 100 W / max. 200 W	
Temperature / Operation		+5 - 40°C / 10 - 85 %, not condensing	
humidity		0 - 60°C / 20 - 85 %, not condensing	
Stock		-25 - 60°C / 20 - 85 %, not condensing	
Transport		-25 - 60°C / 20 - 85 %, not condensing	
Approvals		CE, FCC Class A, ICES-3, cULus, CB, RCM Mark, CCC, CoC Mexico, BIS (no RFID), BSMI Mark, KC Mark	
Operation panel			
Colored LCD touch display	Screen diagonal	" 4,3	
	Resolution	Width x Height px 480 x 272	
Setup options			
	Print Labels Ribbon Peel off Apply label Interfaces Error	Region: - Language - Country - Keyboard - Time zone Time Display: - Brightness - Power saving mode - Orientation Interpreter	
Status bar			
	Data reception Record data stream Pre-warning to a ribbon ending SD memory card plugged in USB memory stick plugged in	WLAN Ethernet USB slave Time USB	
Monitoring			
	Ribbon Labels Print head	Direction of winding Pre-warning Material ending Pre-warning Material ending Voltage Temperature open	
		Pinch roller open Peripheral error	
Test routines			
System diagnostics	on start-up, the print head is also detected		
Information display, print test, analysis	Status printout List of fonts List of devices WLAN status Record print data on a memory card	Test grid Label profile List of events Monitor mode Check digit, plain text printout and start/stop coding are options depending from the code type.	
Status reports	- Printout of device settings, e.g. durations of printing and hours in operation - Device status request triggered by software command - Display of network errors, missing links, barcode errors, peripheral errors, etc.		
Fonts			
Provided internally	5 bitmap fonts: 12 x 12 dots 16 x 16 dots 16 x 32 dots OCR-A OCR-B	7 vector fonts: AR Heiti Medium GB-Mono CG Triumvirate Condensed Bold Garuda HanWangHeiLight Monospace 821 Swiss 721 Regular, Bold	
To be stored	TrueType fonts		
Character sets	Windows-1250 to -1257 DOS 437, 737, 775, 850, 852, 857, 862, 864, 866, 869 EBCDIC 500 ISO 8859-1 to -10 and -13 to -16 WinOEM 720 UTF-8 DEC MCS	MacRoman KOI8-R	
	Western European Eastern European Chinese, simplified Chinese, traditional Thai	Cyrillic Greek Latin Hebrew Arabic	
Fonts			
Graphics			
	Elements	lines, arrows, rectangles, circles, ellipses - filled or filled with fading	
	Formats	PCX, IMG, BMP, TIF, MAC, GIF, PNG	
Codes			
	1D barcodes (linear)	Code 39, Code 93 Code 39 Full ASCII Code 128 A, B, C EAN 8, 13 EAN/UCC 128/GS1-128 EAN/UPC Appendix 2 EAN/UPC Appendix 5 FIM HIBC	Interleaved 2/5 Ident and routing code of Deutsche Post Codabar JAN 8, 13 MSI Plessey Postnet RSS 14 UPC A, E, E0
	2D and stacked codes	DataMatrix DataMatrix Rectangle Extension QR code Micro QR code rMQR code GS1 QR code GS1 DataMatrix GS1 Digital Link (QR and DataMatrix) PDF 417 Micro PDF 417 UPS MaxiCode GS1 DataBar Aztec Codablock F Dotcode RSS 14 truncated, limited, stacked, stacked omni-directional	
		Heights, modular widths and ratio are variable Orientations 0°, 90°, 180°, 270°	
Software			
	Label software	cablabel S3 Lite cablabel S3 Viewer cablabel S3 Pro cablabel S3 Print	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	Running also with	CODESOFT Loftware Spectrum NiceLabel BarTender	
	Stand-alone operation		<input checked="" type="checkbox"/>
	Windows printer drivers certified WHQL for	Windows 10 Windows 11	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	Apple printer drivers	Mac OS X 10.6 or any later release	<input checked="" type="checkbox"/>
	Linux printer drivers	CUPS 1.2 or any later release	<input checked="" type="checkbox"/>
	Programming	JScript printer language abc Basic Compiler ZPL II (Datastream be tested in advance)	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>
	Integration	SAP Database Connector	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>
	Administration	Printer control Configuration on the Intranet / Internet	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>

cab uses free and Open Source software in its products.  
For information see [www.cab.de/opensource](http://www.cab.de/opensource)

# cablabel S3 software

## Design, print, administrate

cablabel S3 opens up the full potential of cab devices. Creating a label is the first step. cablabel S3 adapts to requirements easily using a modular design. Plug-ins like the JScript Viewer support native JScript programming, as well as other features. The designer user interface and the JScript code synchronize in real time. The Database Connector and other special features can be integrated, so are barcode verifiers.



For further information see  
[www.cab.de/en/cablabel](http://www.cab.de/en/cablabel)



# Stand-alone printing

A printer can select and print labels even when the system is disconnected from a host.

Labels are designed using software such as cablabel S3 or a text editor on a PC. Label formats, texts, graphics and data taken from a database are transferred to a memory card, a USB memory stick or the internal IFFS memory.

Only variable data are sent to the printer using a keyboard, a barcode scanner, scale or another host system and/or are recalled from a host by the Database Connector and printed.



# OPC UA

The latest cab printers are ready to interact with machines and components of different manufacturers in industrial plants.

An OPC UA server and a client are part of the firmware.

The server enables a printer be configured and controlled. Dynamic print data can be edited using a defined programming interface.

The integral client enables reading data fields from other machines ready for OPC UA, as well as transferring data to a label. No additional software is needed.



# Printer control

## Drivers



cab provides drivers to control a printer with software other than cablabel S3.



Free download on [www.cab.de/en/support](http://www.cab.de/en/support)



## Programming



### JScript

cab printers embed JScript language.

Download free manual on [www.cab.de/en/programming](http://www.cab.de/en/programming)



### abc Basic Compiler

Integral to the firmware, abc in addition to JScript enables advanced programming before data are edited for printout. For example, external printer languages can be replaced without intervening in a print job in progress. Data may be imported as well from other systems such as scales, barcode scanners or PLC.

## Connecting to SAP®

Labels can be printed from SAP<sup>1)</sup> on cab devices and systems. There are various methods:

- Printing with SAPscript
- Printing with SmartForms
- Printing with Adobe Interactive Forms

See instructions in detail on [www.cab.de/en/sap](http://www.cab.de/en/sap)


# Printer administration

## Configuration on the Intranet / Internet



Integral HTTP / FTP servers enable a printer be controlled or configured, firmware be updated and memory cards be administrated using standard applications such as a web browser or a FTP client.

Administrators and operators on behalf of SNMP / SMTP are notified of states, alerts and errors by email or SNMP datagrams. Time and date are synchronized by a time server.

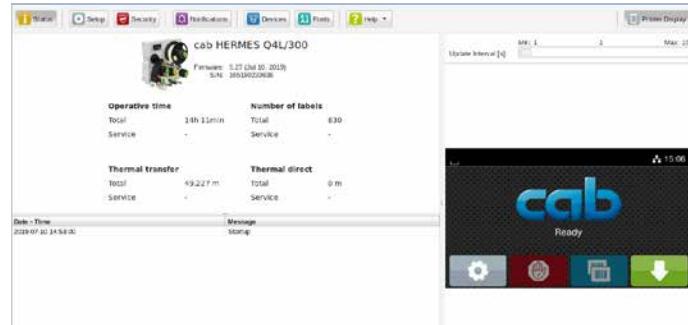

## Database Connector

Printers in a network may access data from a ODBC / OLEDB database and print it on labels. Data can be rewritten to a database while print jobs are in progress.



<sup>1)</sup> SAP and associated logos are trademarks or registered trademarks of SAP SE.

# Applicators



## Automatic labeling

The HERMES HQ applicators are a further development of the proven HERMES applicators, fully compatible, adding extra functions. Existing applications can continue without limitations.

## Easy to configure

The applicator can be fully set on the printer control panel, configurations be stored and called up. Automatic calibration features speed up the setup.

## Process control

Detailed statistical values are provided, so are sophisticated error messages. Constant control enables response right away in events of errors.

## Updates

Applicator firmware can be updated on the printer control panel or the printer's web server. New features and specific solutions can therefore be tested right away and distributed in the field.

### ① Long product life

by a precise and low-wear linear guide

### ② Products of variable heights

Labels can be applied on different heights using a stroke cylinder. Its standard lengths are 200, 300 and 400 mm. Further lengths can be provided upon request.

### ③ Protective chassis

is a standard to protect the cylinder and the guide. It can be provided adapted to the product jig on a labeling workstation.

### ④ Highly reliable processes

Support air and intake air can be defined, so can stroke speed. Sensor control

### ⑤ Label application

in real time. Small or large labels, 4 to 250 mm high and 4 to 174 mm wide, can be processed using an applicator

### ⑥ Pivoting applicator

The print mechanics can be accessed quickly and easily in case of maintenance or if materials have to be replaced.

## Options:

### Pressure-reducing valve

It reduces the pressure exerted by the stroke cylinder to a product.

### Pressure-reduced applicator

It has been designed for manual workstations missing a protective cover. The cylinder diameter is reduced to 12 mm. To prevent from injuries, a safety valve limits compressed air to a maximum of 4.8 bar.

# Applicators, transfer modules and options

Applicators		Page	HERMES Q			Universal pad		Tamp-on pad		Tamp-on pad, providing a damping layer		Tamp-on pad, providing a label stop		Blow-on pad		Form pad		Tamp-on pad, spring-mounted		Universal pad, spring-mounted		Tamp-on pad, spring-mounted		Roll-on pad		Corner-wrap pad		Brush		Transport belt with wipe-down roller		Blow pad with template		Pressure-reducing valve		Pressure-reduced applicator						
			2	4	6.3	Order code	11	11	12	61	21	88	30	31	31	41	51	30	31	31	41	51	30	31	31	41	51	30	31	31	41	51	30	31	31	41	51					
Product marking	Swing applicator	18	HQ 3214	HQ 3214			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>																																
	Stroke applicator	19/20	HQ 4114	HQ 4114			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																															
	Stroke turn applicator	21	HQ 4214	HQ 4214			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>																																
	Stroke applicator	22	HQ 4414	HQ 4414			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																	
	Swing stroke applicator	23	HQ 4514	HQ 4514								<input type="checkbox"/>																														
	Flag applicator	24		HQ 4712															<input type="checkbox"/>																							
Package marking	Front side applicator	25		HQ 3014				<input type="checkbox"/>											<input type="checkbox"/>					<input type="checkbox"/>																		
		25			HQ 3016		<input type="checkbox"/>																<input type="checkbox"/>																			
	Stroke applicator	26/27		HQ 4014			<input type="checkbox"/>	<input checked="" type="checkbox"/>											<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																	
		26/27			HQ 4016		<input type="checkbox"/>																<input type="checkbox"/>	<input type="checkbox"/>																		
	Stroke applicator	28		HQ 4024															<input type="checkbox"/>																							
	Stroke blow applicator	29		HQ 4614								<input type="checkbox"/>																														
	Demand module	30	HQ 5112	HQ 5114	HQ 5116																																					
	Vacuum belt applicator	31		HQ 5314	HQ 5316																																					
		32		HQ 5414	HQ 5416																																					
	Demand table	33		HQ 5714																																						
	Air jet box	34		HQ 6114																																						

Applicator type code index		HQ 4414L-200
Type	HQ 441	
Label printer	HERMES Q2	2
	HERMES Q4	4
	HERMES Q4.3	4
	HERMES Q6.3	6
Direction to which dispense labels	left	L
	right	R
Cylinder stroke	200	
	300	
	400	
	600	
	800	→ upon request

Transfer module type code index		4014R-1100
Applicator (see applicator type codes)		
Type	Universal / tamp-on pad	with sliding foil
	Tamp-on pad, providing a damping layer	11
	Tamp-on pad, providing a label stop	12
	Blow-on pad	61
	Form pad	21
	Tamp-on pad, spring-mounted	88
	Universal / tamp-on pad, spring-mounted	30
	Roll-on pad	31
	Corner-wrap pad	41
		51
[F]	Depth of a pad immersing in mm	00
	A pad dips into a surface in the range of a label. See specified depths of immersion in the technical data of an applicator.	

# Swing applicator HQ 3214

Labels very small or midsized can be applied in real time, preferably from the side.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. A rotary cylinder pivots into position. The label is transferred to a product by a stroke cylinder. Rotary angles and linear hubs are adjustable.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

4.1



Swing applicator	HQ 3214 L/R-40
Label application	from the side
State of a product at rest	■
at the moment a label is applied	in motion
Product heights	uniform
Distance of a product to the peel-off plate	mm 250-280
Linear guidance, horizontal	mm 5-30
Pivot angles	45°-95°
Weight of applicator packaging excluded	kg 4.5
Consumption of power	W max. 15
Compressed air	bar 4.5
Cycle rate <sup>1)</sup>	labels/min approx. 20

<sup>1)</sup>calculated using labels 40 mm high and a print speed of 100 mm/s



### Tamp-on pad

Labels are precisely tamped on plane surfaces. Recessed levels are possible as well.

### Tamp-on pad, providing a damping layer

When applying labels to hard surfaces, the noise level is reduced. It benefits also in cases of rough structures or little unevenness.

### Tamp-on pad, providing a label stop

It enables small labels be applied exactly on spot to a product.

### Blow-on pad

It benefits when labels have to be applied to sensitive surfaces or products in motion. Labels are blown on by a blast of air. Stroke cylinder adjustment enables bridging distances of 5 to 10 mm to the surface of a product.

Transfer modules	Tamp-on pad	Tamp-on pad, providing a damping layer	Tamp-on pad, providing a label stop	Blow-on pad
	3214 L/R 11 F	3214 L/R 12 F	3214 L/R 61 F	3214 L/R 2100
Label widths	HERMES Q2 mm 4-58	10-58	10-58	10-58
	HERMES Q4/Q4.3 mm 10-114	10-114	10-114	10-80
Label heights	HERMES Q2 mm 5-80	8-80	5-80	10-80
	HERMES Q4/Q4.3 mm 8-80	8-80	8-80	10-80
Depth of a pad immersing F	up to mm 10	30	30	-

# Stroke applicators HQ 4114, HQ 4116

Labels very small or midsized can be applied in real time from all sides.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by a short stroke cylinder, the pad is brought into position in horizontal direction. The label is transferred to a product by a stroke cylinder. The length of the stroke cylinder defines the maximum distance of a product to the peel-off plate.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

## Options

5.17 **Pressure-reducing valve**

5.18 **Pressure-reduced applicator**



Stroke applicators	HQ 4114 L/R-200	HQ 4114 L/R-300	HQ 4114 L/R-400	HQ 4114 L/R-600	HQ 4116 L/R-200	HQ 4116 L/R-300	HQ 4116 L/R-400
Label applications				from the top, from below, from the side	from the top		from the top, from below, from the side
State of a product at rest					■		
at the moment a label is applied in motion							
Product heights uniform				only blow-on pad			
variable				only blow-on pad			
all tamp-on pads							
Short stroke cylinder, horizontal mm				10			
Distance of a product to the bottom of the unit up to mm	135	235	335	535	135	235	335
Weight of applicator packaging excluded kg	5	6	7	9	5	6	7,5
Consumption of power W max.				15			
Compressed air bar				4,5			
Cycle rate <sup>1)</sup> labels/min approx.				30			

<sup>1)</sup> Calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s



### Tamp-on pad

Labels are precisely tamped on plane surfaces. Recessed levels are possible as well.

### Tamp-on pad, providing a damping layer

When applying labels to hard surfaces, the noise level is reduced. It benefits also in cases of rough structures or little unevenness.

### Tamp-on pad, providing a label stop

It enables small labels be applied exactly on spot to a product.

### Blow-on pad

It benefits when labels have to be applied to sensitive surfaces or products in motion. Labels are blown on by a blast of air. Stroke cylinder adjustment enables bridging distances of 5 to 10 mm to the surface of a product.

	Tamp-on pad	Tamp-on pad, providing a damping layer	Tamp-on pad, providing a label stop	Blow-on pad
<b>Transfer modules</b>	<b>4114, 4116 L/R 11 F</b>	<b>4114, 4116 L/R 12 F</b>	<b>4114, 4116 L/R 61 F</b>	<b>4114 L/R 2100</b>
Label widths	HERMES Q2 mm	4-58	10-58	10-58
	HERMES Q4/Q4.3 mm	10-114	10-114	10-114
	HERMES Q6.3 mm	50-174	50-174	-
Label heights	HERMES Q2 mm	4-80	8-80	4-80
	HERMES Q4/Q4.3 mm	8-80	8-80	8-80
	HERMES Q6.3 mm	8-80	8-80	-
Depth of a pad immersing F <sup>2)</sup>	up to mm	130	130	130

<sup>2)</sup> On the cover HERMES Q2/Q4/Q4.3 cut-out dimension F standard 60 mm, optional 100 mm, upon request up to 110 mm  
On the cover HERMES Q6.3 cut-out dimension F standard 25 mm, upon request up to 110 mm

# Stroke applicators HQ 4114, HQ 4116

Labels very small or midsized can be applied in real time from all sides.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by a short stroke cylinder, the pad is brought into position in horizontal direction. The label is transferred to a product by a stroke cylinder. The length of the stroke cylinder defines the maximum distance of a product to the peel-off plate.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

4.2



Stroke applicators	HQ 4114 L/R-200	HQ 4114 L/R-300	HQ 4114 L/R-400	HQ 4114 L/R-600	HQ 4116 L/R-200	HQ 4116 L/R-300	HQ 4116 L/R-400
State of a product at the moment a label is applied at rest				■			
Label applications			from the top, from below, from the side		from the top		from the top, from below, from the side
Product heights variable				■			
Short stroke cylinder, horizontal mm				10			
Distance of a product to the bottom of the unit up to mm	135	235	335	535	135	235	335
Weight of applicator packaging excluded kg	5	5.5	7	9	5.5	6	7.5
Consumption of power W max.				15			
Compressed air bar				4.5			
Cycle rate <sup>1)</sup> labels/min approx.				20			

<sup>1)</sup> Calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s  
If the height of the form pad exceeds 60 mm, the cover of HERMES Q must be adapted.

## Form pad

Labels are precisely applied to cylindric objects, inclined or curved surfaces. Curved form pads prevent from blistering on very smooth and plane surfaces. 200° maximum label wrapping on cylindric objects



Transfer module	Form pad	
	4114, 4116 L/R 8800	
Label widths	HERMES Q2 mm	10 - 58
	HERMES Q4/Q4.3 mm	10 - 114
	HERMES Q6.3 mm	50 - 174
Label heights	mm	8 - 80

# Stroke turn applicator HQ 4214

Labels very small or midsized can be applied in real time from all sides whenever the unit is difficult to install.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by a rotary cylinder, the pad pivots into position by at most 180° in horizontal direction. The label is transferred to a product by a stroke cylinder. The length of the stroke cylinder defines the maximum distance of a product to the peel-off plate.

## Accessories



### 5.13 Blow tube

### 5.14 Unit to regulate compressed air

## Options

### 5.17 Pressure-reducing valve

### 5.18 Pressure-reduced applicator



Stroke turn applicator		HQ 4214 L/R-200	HQ 4214 L/R-300	HQ 4214 L/R-400
State of a product at the moment a label is applied	at rest		■	
Label applications	in motion		only blow-on pad	
Product heights	uniform		from the top, from below, from the side	
	variable		only blow-on pad	
Rotary angle, horizontal	90°, 0°			■
	180° if labels are no more than 15 mm high			
Distance of a product to the bottom of the unit	up to mm	135	235	335
Weight of applicator	packaging excluded kg	5	5.5	7.5
Consumption of power	W max.		15	
Compressed air	bar		4.5	
Cycle rate <sup>1)</sup>	labels/min approx.		20	

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s



## Tamp-on pad

Labels are precisely tamped on plane surfaces. Recessed levels are possible as well.

## Tamp-on pad, providing a damping layer

When applying labels to hard surfaces, the noise level is reduced. It benefits also in cases of rough structures or little unevenness.

## Tamp-on pad, providing a label stop

It enables small labels be applied exactly on spot to a product.

## Blow-on pad

It benefits when labels have to be applied to sensitive surfaces or products in motion. Labels are blown on by a blast of air. Stroke cylinder adjustment enables bridging distances of 5 to 10 mm to the surface of a product.

Transfer modules	Tamp-on pad	Tamp-on pad, providing a damping layer	Tamp-on pad, providing a label stop	Blow-on pad
	4214 L/R 11 F	4214 L/R 12 F	4214 L/R 61 F	4214 L/R 2100
Label widths	HERMES Q2 mm	4 - 58	10 - 58	10 - 58
	HERMES Q4/Q4.3 mm		10 - 80	10 - 58
Label heights	HERMES Q2 mm	4 - 40	8 - 40	4 - 40
	HERMES Q4/Q4.3 mm	8 - 40	8 - 40	8 - 40
Depth of a pad immersing F <sup>2)</sup>	up to mm	90	90	90

<sup>2)</sup> On the cover HERMES Q2/Q4/Q4.3 cut-out dimension F standard 60 mm, optional 100 mm

## Stroke applicator HQ 4414

Labels very small or midsized can be applied in real time from all sides. Positions to which labels shall be applied can be adjusted in directions x and y.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by two short stroke cylinders, the pad is brought into position. The label is transferred to a product by a stroke cylinder. The length of the stroke cylinder defines the maximum distance of a product to the peel-off plate.



## Accessories

### 5.13 Blow tube

## 5.14 Unit to regulate compressed air

## Options

## 5.17 Pressure-reducing valve

## 5.18 Pressure-reduced applicator



Stroke applicators		HQ 4414 L/R-200	HQ 4414 L/R-300	HQ 4414 L/R-400
State of a product at the moment a label is applied	at rest		■	
Label applications			from the top, from below, from the side	
Product heights	variable		■	
Short stroke cylinders, horizontal	direction x mm		3-7	
	direction y mm		11-15	
Distance of a product to the bottom of the unit	up to mm	135	235	335
Weight of applicator	packaging excluded kg	5	5.5	6
Consumption of power	W max.		15	
Compressed air	bar		4.5	
Cycle rate <sup>1)</sup>	labels/min approx.		25	

<sup>1)</sup>calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s



### Tamp-on pad

Labels are precisely tamped on plane surfaces.  
Recessed levels are possible as well.

### **Tamp-on pad, providing a damping layer**

When applying labels to hard surfaces, the noise level is reduced. It benefits also in cases of rough structures or little unevenness.

**Tamp-on pad, providing a label stop**

It enables small labels be applied exactly on spot to a product.

		<b>Tamp-on pad</b>	<b>Tamp-on pad, providing a damping layer</b>	<b>Tamp-on pad, providing a label stop</b>
<b>Transfer modules</b>		<b>4414 L/R 11 F</b>	<b>4414 L/R 12 F</b>	<b>4414 L/R 61 F</b>
Label widths	HERMES Q2	mm	4-58	10-58
	HERMES Q4/Q4.3	mm		10-114
Label heights	HERMES Q2	mm	4-80	8-80
	HERMES Q4/Q4.3	mm		8-80
Depth of a pad immersing F <sup>2)</sup>		up to mm		120

<sup>2)</sup> On the cover HERMES Q2/Q4/Q4.3 cut-out dimension F standard 60 mm, optional 100 mm

# Swing stroke applicator HQ 4514

Labels can be applied in real time from all sides on inner surfaces of profiles and pipes. Stroke cylinder adjustment enables labels to be transferred exactly to their dedicated spots.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by a rotary cylinder, the pad pivots to the level on which the label shall be applied. The label is moved to the point of transfer by a stroke cylinder.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**



Swing stroke applicators	HQ 4514 L/R-200	HQ 4514 L/R-300	HQ 4514 L/R-400
State of a product at the moment a label is applied	at rest	■	
Label applications		from the top, from below, from the side	
Product heights	uniform	■	
Pivot angle, vertical		120°	
Distance between the bottom of the unit and the upper label ending	up to mm	150 <sup>2)</sup>	250 <sup>2)</sup>
Weight of applicator	packaging excluded kg	6	6.5
Consumption of power	W max.	15	7
Compressed air	bar	4.5	
Cycle rate <sup>1)</sup>	labels/min approx.	20	

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s

<sup>2)</sup> depending from the height of a label



## Blow-on pad


Labels are blown on a product surface by a blast of air, bridging a distance of 5 to 10 mm.

Transfer module	Blow-on pad
Label widths	4514 L/R 2100
HERMES Q2	10-58
HERMES Q4/Q4.3	10-80
Label heights	10-60

# Flag applicator HQ 4712

Labels can be applied in real time from all sides precisely on round materials such as cables, hoses or pipes.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. The label is transferred to the spot of application by a stroke cylinder. A further cylinder guides the material all around the material using cam control. First, both endings of a label are stuck together. Then the label is tamped to the round material. The length of the stroke cylinder defines the maximum distance of a product to the peel-off plate.

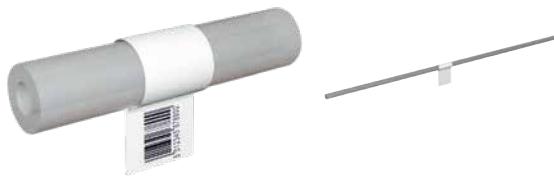

## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

4.6





Flag applicator		HQ 4712
State of a product at the moment a label is applied	at rest	■
Label applications		from the top, from below, from the side rotated vertically: 0 - 180° clockwise (request in case of other rotations)
Product heights	uniform	■
Distance of a product to the bottom of the unit using a cylinder stroke of 300	at least mm	70
	up to mm	260
Depth of pliers immersing	mm	55
Offset P	up to mm	1.0 <sup>2)</sup>
Weight of applicator	packaging excluded kg	8
Consumption of power	W max.	15
Compressed air	bar	4.5
Cycle rate, printing and applying only <sup>3)</sup>	labels/min approx.	15

<sup>1)</sup> Processing labels 50 to 58 mm wide requires a spacer.

<sup>2)</sup> depending from the quality of a label

<sup>3)</sup> calculated using a print speed of 100 mm/s

<sup>4)</sup> Flag on product requires >60 mm clearance on one side without components, bend or step

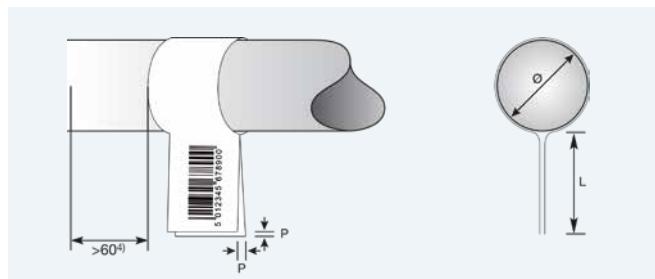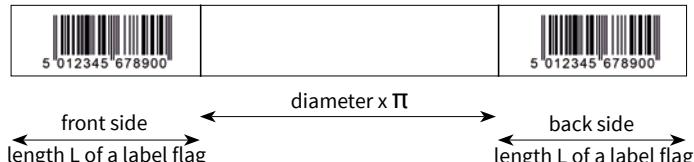


Transfer module		Form pad
Label widths HERMES Q4L/Q4.3L	mm	4712 L 300
Label heights	mm	50 <sup>1)</sup> - 100
Diameter	mm	10 - 50
		3 - 16

# Front side applicators HQ 3014, HQ 3016

Labels can be applied in real time from the top or the side to packages in motion. Front sides or back sides of a package are preferred.


The pad locates in front of the peel-off plate. It picks up a label while it is being printed. The label is transferred to a product with the help of a rotary cylinder. The package is detected by a sensor and the pivot arm with the pad returned to its initial position.

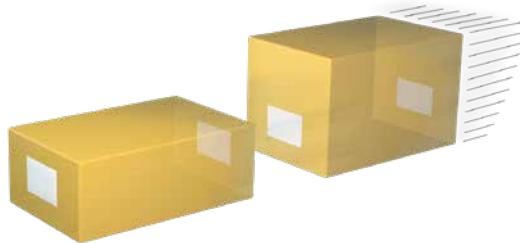

## Accessories

### 5.13 Blow tube

### 5.14 Unit to regulate compressed air

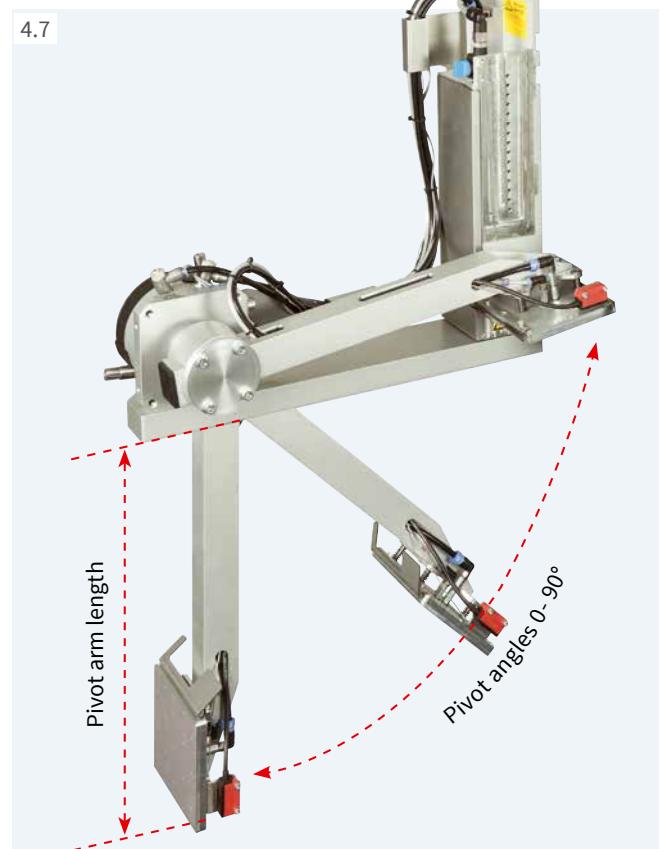

Front side applicators	HQ 3014 L/R-200	HQ 3014 L/R-300	HQ 3014 L/R-400	HQ 3014 L/R-600	HQ 3016 L/R-200	HQ 3016 L/R-300	HQ 3016 L/R-400	HQ 3016 L/R-600
State of a package at rest					■			
at the moment a label is applied in motion					■			
Label applications					from the top, from the side, from the front, from the back			
Package heights variable					■			
Pivot arm lengths <sup>1)</sup> mm	200	300	400	600	200	300	400	600
Pivot angles					0 - 90°			
Weight of applicators packaging excluded kg	9	9.5	10.5	11.5	9.5	10	11	12
Consumption of power W max.					15			
Compressed air bar					4,5			
Cycle rate <sup>2)</sup> labels/min approx.					15			

<sup>1)</sup> Pivot arm length defines the spot of a label (lower margin) to be reached at 90° below a HERMES Q footprint.

<sup>2)</sup> calculated using a pivot arm 200 mm long, labels 100 mm high, a print speed of 100 mm/s



### Tamp-on pad

Labels are precisely tamped on plane surfaces. Recessed levels are possible as well.



### Tamp-on pad, spring-mounted

Labels can be applied to surfaces inclined by a maximum of 15°. Heights within the area of a label may vary by 10 mm at most.



### Blow-on pad

Labels are blown on a package surface by a blast of air, bridging a distance of 5 to 10 mm.

Transfer modules	Tamp-on pad		Tamp-on pad, spring-mounted		Blow-on pad	
	3014, 3016 L/R 1100		3014, 3016 L/R 3100		3014 L/R 2100	
Label widths	HERMES Q4/Q4.3 mm	25 - 114		80 - 114		25 - 114
	HERMES Q6.3 mm	25 - 174		80 - 174		-
Label heights	HERMES Q4/Q4.3 mm	8 - 250		80 - 250		10 - 100
	HERMES Q6.3 mm	25 - 250		80 - 250		25 - 100

# Stroke applicators HQ 4014, HQ 4016

Labels can be applied in real time from all sides to packages. The type of pad defines whether a package has to be at rest or can be in motion at the time a label is applied.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. The label is transferred to a package with the help of a stroke cylinder. The package is detected by a sensor and the pad returned to its initial position. The length of the stroke cylinder defines the maximum distance of a package to the peel-off plate.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

## Options

5.17 **Pressure-reducing valve**

5.18 **Reduced-force applicator**

4.8



Stroke applicators	HQ 4014L/R-200	HQ 4014L/R-300	HQ 4014L/R-400	HQ 4014L/R-600	HQ 4016L/R-200	HQ 4016L/R-300	HQ 4016L/R-400	HQ 4016L/R-600
Package heights	variable				■			
State of a package	at rest				■			
at the moment a label is applied								
Label applications		from the top, from below, from the side		from the top, from below		from the top, from below, from the side		from the top, from below
Distance of a package to the bottom of the unit	up to mm	130	230	330	530	130	230	330
Weight of applicator	packaging excluded	kg	5	5	7	9	5	5.5
Consumption of power	W max.					15		
Compressed air	bar					4,5		
Cycle rate <sup>1)</sup>	labels/min approx.					25		

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 100 mm high, a print speed of 100 mm/s



## Tamp-on pad

Labels are precisely tamped on plane surfaces. Recessed levels are possible as well.

## Universal pad

Labels can be tamped on plane surfaces. Drilled holes are provided in gaps of 5 mm to suck a label. The holes are covered by a sliding foil, but can be opened according to the size of a label using a punching tool. Delivery includes two extra foils.

## Tamp-on pad, spring-mounted

Labels can be applied to surfaces inclined by a maximum of 15°. Heights within the area of a label may vary by 10 mm at most.

## Universal pad, spring-mounted

Labels can be applied to surfaces inclined by a maximum of 15°. Heights in the area of a label may vary by 10 mm at most. To suck a label, drilled holes are provided in gaps of 5 mm and covered by a sliding foil. Delivery includes two extra foils.

	Tamp-on pad	Universal pad	Tamp-on pad, spring-mounted	Universal pad, spring-mounted
<b>Transfer modules</b>	<b>4014, 4016 L/R 11 F</b>	<b>4014 L/R 1100</b>	<b>4014, 4016 L/R 3100</b>	<b>4014 L/R 3100</b>
Label widths	HERMES Q4/Q4.3 mm	20-114	75 / 90	80-114
	HERMES Q6.3 mm	50-174	-	80-174
Label heights	HERMES Q4/Q4.3 mm	20-210	60 / 90	80-210
	HERMES Q6.3 mm	25-210	-	80-210
Depth of a pad immersing <sup>2)</sup>	up to mm	140	-	-

<sup>2)</sup> On the cover HERMES Q2/Q4/Q4.3 cut-out dimension F standard 60 mm, optional 100 mm, upon request up to 120 mm  
On the cover HERMES Q6.3 cut-out dimension F standard 25 mm, upon request up to 120 mm

# Stroke applicators HQ 4014, HQ 4016

Labels can be applied in real time from all sides to packages. The type of pad defines whether a package has to be at rest or can be in motion at the time a label is applied.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. The label is transferred to a package with the help of a stroke cylinder. The package is detected by a sensor and the pad returned to its initial position. The length of the stroke cylinder defines the maximum distance of a package to the peel-off plate.



## Accessories

5.13 **Blow tube**

5.14 **Unit to regulate compressed air**

## Options

5.17 **Pressure-reducing valve**

5.18 **Pressure-reduced applicator**

Stroke applicators		HQ 4014L/R-200	HQ 4014L/R-300	HQ 4014L/R-400	HQ 4014L/R-600	HQ 4016L/R-200	HQ 4016L/R-300	HQ 4016L/R-400	HQ 4016L/R-600
State of a package at rest at the moment a label is applied		Blow-on pad, Corner-wrap pad							
in motion		Blow-on pad, Roll-on pad							
Label applications from the top		Blow-on pad, Roll-on pad, Corner-wrap pad							
from below		Blow-on pad, Roll-on pad							
from the side		Blow-on pad, Roll-on pad			-	Blow-on pad, Roll-on pad			-
Distance of a package to the bottom of the unit	Blow-on pad up to mm	140	240	340	540	-	-	-	-
	Roll-on pad up to mm	160	260	360	560	160	260	360	560
	Corner-wrap pad up to mm	100	200	300	500	-	-	-	-
Package heights uniform		Blow-on pad							
variable		Blow-on pad, Corner-wrap pad							
Weight of applicator	packaging excluded kg	5	5	7	9	5.5	5.5	7.5	9.5
Consumption of power	W max.					15			
Compressed air	bar					4,5			
Cycle rate <sup>1)</sup>	labels/min approx.					25			

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 100 mm high, a print speed of 100 mm/s




### Blow-on pad

It benefits when labels have to be applied to sensitive surfaces or packages in motion. Labels are blown on by a blast of air. Stroke cylinder adjustment enables bridging distances of 5 to 10 mm to the surface of a package.



### Roll-on pad

Labels are rolled on plane surfaces while these packages are in motion.

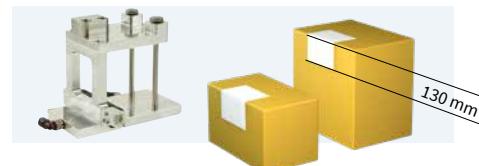

### Corner-wrap pad

Labels are applied to a package on two sides adjacent to one another. One half of a label is applied to the top of a package. Then the other half of the label is rolled on.

Transfer modules	Blow-on pad	Roll-on pad	Corner-wrap pad
Label widths	4014 L/R 2100	4014, 4016 L/R 4100	4014 L/R 5100
Label widths	20-114	25-114	20-114
Label heights	HERMES Q4/Q4.3 mm	provided upon request	-
Label heights	20-100	50-174	60-210
Label heights	provided upon request	80-250	-
Label heights		80-250	

# Stroke applicators HQ 4024

- As much as 90 percent savings of compressed air
- Labels applied onto variable heights using one tamp pad

Labels are applied in real time onto packages of different heights.

A spring-mounted tamp pad enables labels be applied reliably even onto inclined surfaces. Three types are provided for labels as high as 40 mm to 100 mm, 150 mm and 200 mm. Labels may be 50 mm to 105 mm wide in each case.

Labels are sucked by an electrically driven fan. Only the stroke cylinder requires compressed air.



## Accessories

5.14 Unit to regulate compressed air

## Options

5.17 Pressure-reducing valve




Stroke applicators	HQ 4024 L/R-200	HQ 4024 L/R-300	HQ 4024 L/R-400	HQ 4024 L/R-600
Distance of a package to the bottom of the unit	up to mm	135	235	335
Package heights	variable		■	
Alternation in the heights of packages	mm max.	100	200	300
Label applications		from the top, from below, from the side		from the top
State of a package at the moment a label is applied	at rest		■	
Controls	Sensor 1	initial / upper end position		
	Sensor 2	label on tamp-on pad		
	Sensor 3	label application / lower end position		
Consumption of power	W max.	30		
Compressed air	bar	4.5		
Cycle rate <sup>1)</sup>	labels/min approx.	30		

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 40 mm high, a print speed of 100 mm/s

## Tamp-on pad, spring-mounted

Labels are precisely tamped onto plane surfaces.

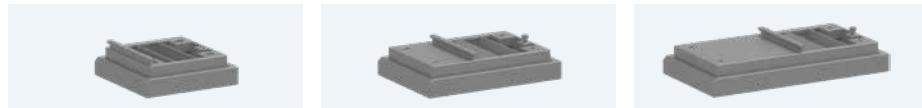


Tamp-on pad, spring-mounted	4024-3000 105 x 100	4024-3000 105 x 150	4024-3000 105 x 200
Label	Width mm	50 - 105	50 - 105
	Height mm	40 - 100	80 - 150
	Thickness $\mu\text{m}$	110	110

# Stroke blow applicator HQ 4614

Labels can be applied in real time from all sides on packages of various heights in motion.

The pad locates in front of the peel-off plate. It picks up a label while it is being printed. Powered by a stroke cylinder and detected by a sensor, the pad moves to a spot approx. 10 mm above a package. The length of the stroke cylinder defines the maximum difference in terms of package heights.

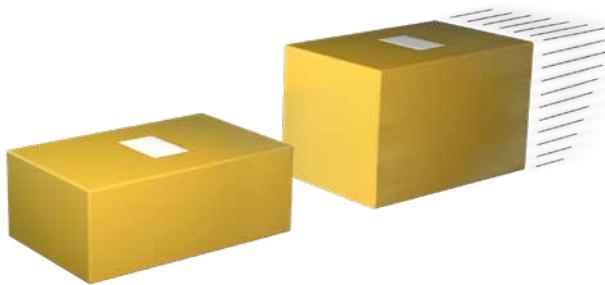

4.10



## Accessories

5.13 **Blow tube**5.14 **Unit to regulate compressed air**

Stroke blow applicator		HQ 4614 L/R-200	HQ 4614 L/R-300	HQ 4614 L/R-400
Distance of a package to the bottom of the unit	up to mm	140	240	340
Package heights	variable		■	
Label applications	from the top, from below, from the side			
State of a package at the moment a label is applied	at rest in motion	■ ■	■ ■	■ ■
Weight of applicator packaging excluded kg		n.a.	5.5	6.5
Consumption of power W max.			15	
Compressed air bar			4.5	
Cycle rate <sup>1)</sup> labels/min approx.			25	

<sup>1)</sup> calculated using a stroke of 100 mm below the unit, labels 100 mm high, a print speed of 100 mm/s

## Blow-on pad

Labels are blown on a package surface by a blast of air, bridging a distance of 5 to 10 mm.




Blow-on pad		4614L/R-2100 B x H
Label widths	HERMES Q4/Q4.3 mm HERMES Q6.3 mm	20-114 provided upon request
Label heights	HERMES Q4/Q4.3 mm HERMES Q6.3 mm	20-100 provided upon request

# Demand modules HQ 5112, HQ 5114, HQ 5116

Series of labels can be applied from all sides to packages in motion. The position to which apply a label can be defined on the dispenser tongue using a guide roller.

While a label is applied, the next one is printed simultaneously. Make sure the speed of the conveyor belt corresponds to the print speed.

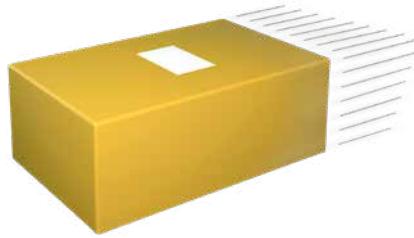

Demand module		HQ 5112 L/R	HQ 5114 L/R	HQ 5116 L/R
Label widths	HERMES Q2	mm	10 - 58	-
	HERMES Q4/Q4.3	mm	-	25 - 114
	HERMES Q6.3	mm	-	46 - 174
Label heights		mm	10 - 250	25 - 250
Distance of the print line to the peel-off plate		mm		400 - 600
State of a package at the moment a label is applied	in motion		■	
Label applications			from the top, from below, from the side	
Package heights	uniform		■	
Distance of a package to the bottom of the unit	mm		80	
Package speeds	mm/s		must correspond to the print speed / 50 - 250 in steps of 25	
Weight of module	packaging excluded	kg	not specified	3
Consumption of power		W max.	not specified	
Cycle rate <sup>1)</sup>	labels/min approx.		60	


<sup>1)</sup> calculated using labels 100 mm high and a print speed of 100 mm/s

# Vacuum belt applicators HQ 5314, HQ 5316

Labels can be applied in real time from all sides on plane surfaces to packages in motion.

The applicator locates in front of the peel-off plate. Printed labels are conveyed by a vacuum belt to the point of transfer to a package. Applying a label is triggered by an external signal.

4.12

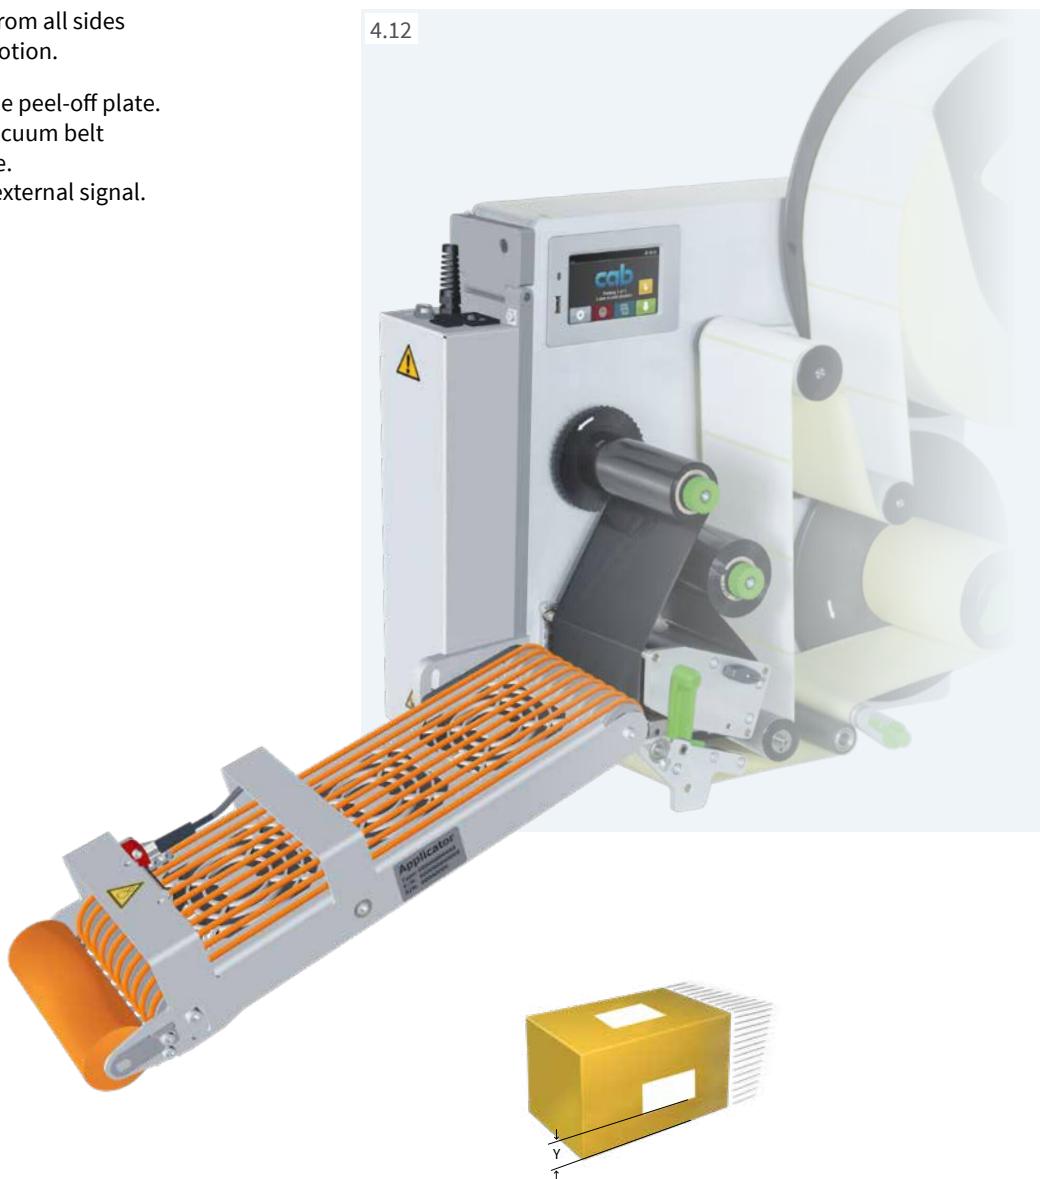

Vacuum belt applicators	HQ 5314-2	HQ 5314-3	HQ 5314-4	HQ 5316-2	HQ 5316-3	HQ 5316-4
Label applications				on plane surfaces		
Directions to which dispense labels				left and right		
Label widths	HERMES Q4/Q4.3 mm	20 - 114	20 - 114	20 - 114	-	-
	HERMES Q6.3 mm	-	-	-	46 - 174	46 - 174
Label heights	mm	60 - 256	60 - 356	60 - 456	60 - 256	60 - 356
State of a package at the moment a label is applied	in motion			■		
Label applications			from the top, from below, from the side			
Package heights	uniform			■		
Package speeds	up to m/s			0.5		
Gap between packages	at least m			0.5		
Vacuum belt speed <sup>1)</sup>	mm/s			100 - 500		
Weight of applicator	packaging excluded kg	7	7	7	8	8
Consumption of power	W max.			90		
Cycle rate <sup>2)</sup>	labels/min up to			30		
Distance of a label to the conveyor belt, when applying from the side	mm			Y = 20		

<sup>1)</sup> The speed of a package must be at least as high as the speed of the vacuum belt.

<sup>2)</sup> calculated using labels 100 mm high and a print speed of 250 mm/s

# Vacuum belt applicators HQ 5414, HQ 5416

Labels can be applied in real time from the top or from the side on cylindric surfaces or corner-wrap to packages in motion.

The applicator locates in front of the peel-off plate. Printed labels are conveyed by a vacuum belt to the point of transfer to a package. Applying a label is triggered by an external signal.

4.13



Vacuum belt applicators	HQ 5414-3	HQ 5414-4	HQ 5416-3	HQ 5416-4
Label applications		on cylindric surfaces and corner-wrap		
Directions to which dispense labels		left and right		
Label widths	HERMES Q4/Q4.3 mm	20 - 114	20 - 114	-
	HERMES Q6.3 mm	-	-	46 - 174
Label heights	mm	80 - 356	80 - 456	80 - 356
State of a package at the moment a label is applied	in motion		■	
Label applications		from the top, from the side		
Package heights	uniform		■	
	variable		■	
Package speeds	up to m/s		0.3	
Gap between packages	at least m		0.5	
Steadiness identified at the point a label is transferred			$F^{1)} = 30 \text{ N}$	
Corner-wrap label applications	up to mm		$X = 160$	
Vacuum belt speed <sup>2)</sup>	mm/s		100 - 300	
Weight of applicator	packaging excluded kg	7	7	8.5
Consumption of power	W max.		90	8.5
Cycle rate <sup>3)</sup>	labels/min up to		15	
Distance of a label to the conveyor belt, when applying from the side	mm		$Y = 20$	

<sup>1)</sup> F = force required to make the vacuum belt pivot

<sup>2)</sup> The speed of a package must be at least as high as the speed of the vacuum belt.

<sup>3)</sup> calculated using labels 100 mm high and a print speed of 250 mm/s

## Demand table HQ 5714

The demand table is a transfer module for the HERMES Q 4 in the left-hand version and enables printed and predispensed labels to be picked up by a robot. The labels are at rest during the pick-up process.

After printing and dispensing, the labels are placed over the extended Peel-off plate, adhesive side facing the dispensing table, ready for transfer to the robot stamp. The labels are at rest during removal. After removal, an automatic retraction can be performed on the printer.

The orientation of assembly of the system is designed for vertical removal.

Optionally, the printed label can be verified by a Scanner (provided by the customer) before it is transferred to the tamp pad. To support the label transfer to the print stamp, an optional chamber system with supporting air holes can be used.

4.14



Demand table		HQ 5714L-100
Label widths	mm	38-114
Label heights	mm	18-100
Orientation		left
Label during acceptance		at rest
Label material		Paper, plastics with release
Label application tolerance	mm	± 0.5
Compressed air	bar	no compressed air; 4.5 bar is an option
Cycle rate	labels/min up to	30


## Air jet box HQ 6114

Labels can be applied to packages in motion or at rest. Each label is sucked by a fan and blown off by a powerful blast of air coming through aligned nozzles. Depending from the size of a label, a maximum distance of 200 mm can be bridged between a package and the peel-off plate.

### 1 Template

to cover all the holes sucking or blowing off air outside a label

By holes pre-scored on an 8 x 8 mm pattern, a template can be adapted easily to the size of a label. By sliding in a template between the suction block and rails, the surface outside a label is covered. Scope of delivery includes five templates.

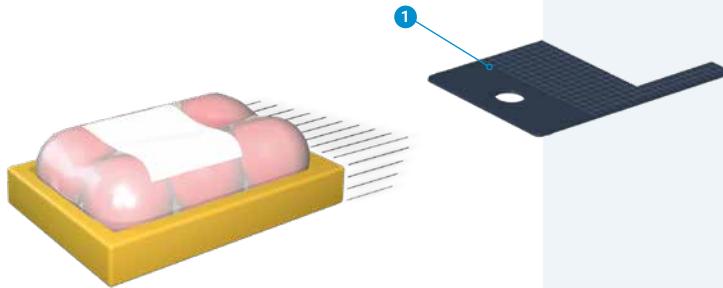

4.15



## Accessories

5.13 **Blow tube**

5.16 **Unit to regulate compressed air, providing a shut-off valve**

Air jet box		HQ 6114 L/R
Label widths	HERMES Q4/Q4.3	mm
Label heights		mm
State of a package	at rest	<input checked="" type="checkbox"/>
at the moment a label is applied	in motion	<input checked="" type="checkbox"/>
Label applications		from the top, from below, from the side
Package heights	variable	<input checked="" type="checkbox"/>
Distance of a package to the peel-off plate	up to mm	200
Weight of air jet box	packaging excluded	kg
Consumption of power	W max.	90
Compressed air	bar	4.5
Cycle rate <sup>1)</sup>	labels/min up to	100

<sup>1)</sup> calculated using labels 50 mm high, a print speed of 250 mm/s, a blast of air lasting 100 ms, with packages located 100 mm to the peel-off plate.

## Accessories provided for applicators



### Blow tube

to provide support air. To assist label transfer, the label is blown from below to the pad.

Provided for 2", 4" or 6" label applications



### Unit to regulate compressed air

4.5 bar default setting

Provided in a left-hand or right-hand design

Delivery includes a fine filter, a pressure control valve with a display, a hose to connect to an applicator's compressed air input and material to assemble the unit to a chassis or a bracket.




### Unit to regulate compressed air, providing a shut-off valve

to vent a hose line subsequent to the unit

Provided in a left-hand or right-hand design

## Examples how to assemble a unit to regulate compressed air

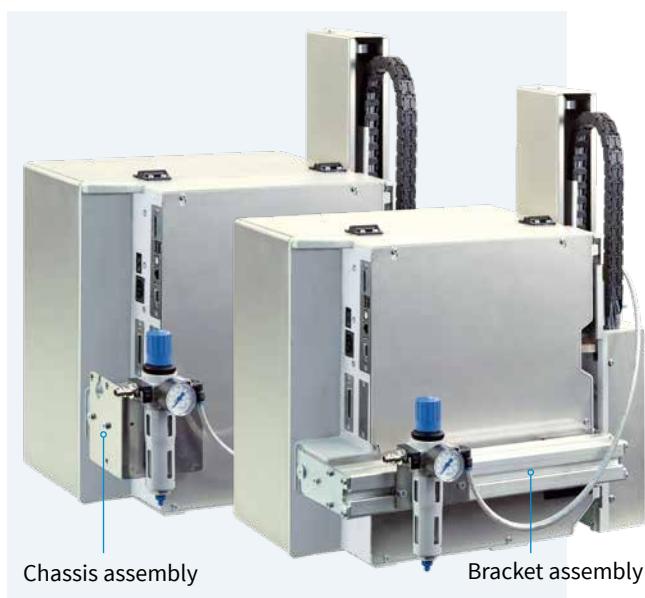

## Options provided for applicators

5.17



5.18



### Pressure-reducing valve

It reduces the pressure exerted by the stroke cylinder to a product.

### Pressure-reduced applicator

It has been designed for manual workstations missing a protective cover. The cylinder diameter is reduced to 12 mm. To prevent from injuries, a safety valve limits compressed air to a maximum of 4.8 bar.

# Tools for assembling HERMES Q

Pos.	Designation	1.1	1.2		1.3
		HERMES Q2	HERMES Q4.3	HERMES Q4	HERMES Q6.3
6.1	Adapter plate	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.2	Profiles 40, 80, 120, 160, 200, 300 mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.3	Base plate 500 x 255 mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-
6.4	Base plate with XY Stop and product sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-



6.1



## Mount

to install on a table or to a production line.  
Provided in a left-hand or right-hand design

The size of the mount can be adapted to an application.

6.2



6.3



6.4



## 1 Adapter plate

to fix a label application system.  
Alternatively, it can be assembled directly to a production line, using the adapter plate with a profile.

## 2 Profile

square aluminum; 40, 80, 120, 160, 200, 300 mm are standards, further lengths can be provided upon request

## 3 Base plate

to fix the product jig; 500 x 255 mm by default

## 4 Base plate with XY stop and product sensor


Standard size 500 x 255 mm

# Tools for assembling HERMES Q


Pos.	Designation	1.1	1.2		1.3
		HERMES Q2	HERMES Q4.3	HERMES Q4	HERMES Q6.3
6.5	Bracket	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.6	Clamped joint designed for a 50 x 50 mm profile	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.7	Flanged joint designed for a 50 x 50 mm profile	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.8	Floor stand 1601	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.9	Floor stand 1602	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.10	Floor stand 1201	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


**Bracket**

to assemble to a floor stand

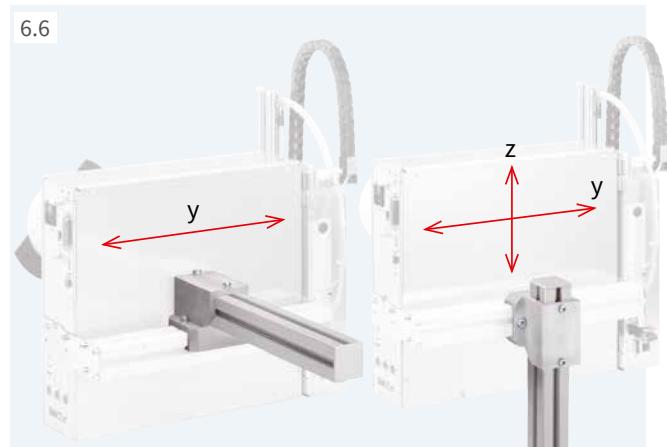
**Clamped joint designed for a 50 x 50 mm profile**

to move in horizontal or vertical direction

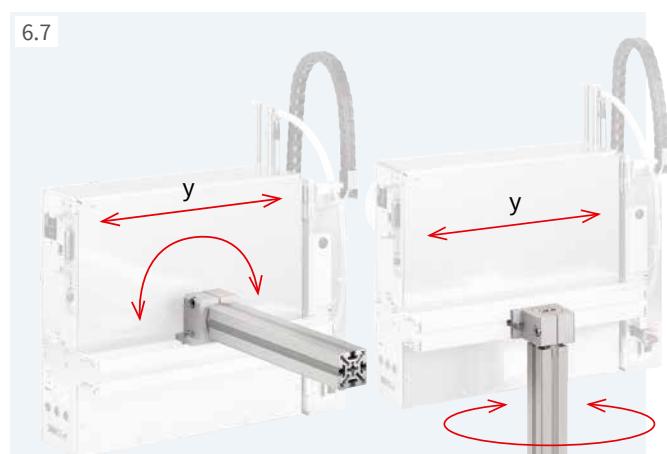
**Flanged joint designed for a 50 x 50 mm profile**

to move in horizontal direction or rotate around an axis

## Floor stands provided for HERMES Q




HERMES Q can be installed to a production line and aligned in three axes to the product to label. Pivoting is also possible.

### Floor stand 1601

It benefits when operating HERMES Q in different production lines. Mobility is provided. At the place of operation, the floor stand can be fixed with the help of feet to adjust.

Floor stand	1601
Base frame	castors, feet
Adjustment of heights and depths	screw clamping
Load if offset is 500 mm	up to kg
Weight	kg
	50
	36

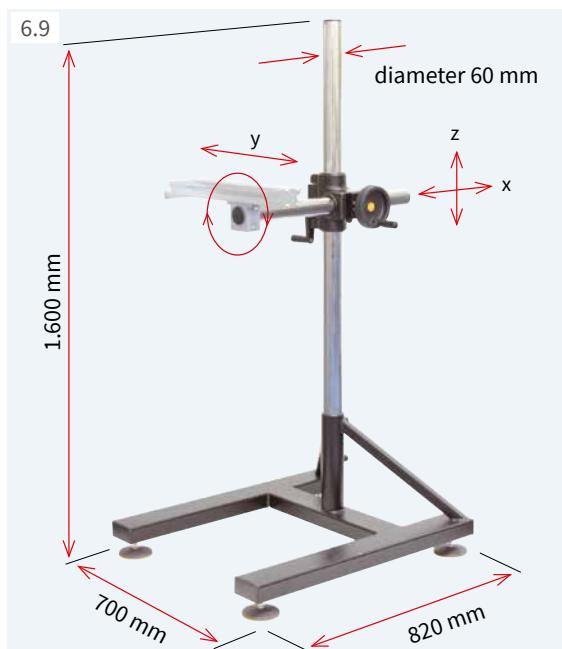


### Floor stand 1602

It benefits if positions to apply labels are changing frequently in terms of heights and depths. HERMES Q can be aligned in directions x and z to a product using a toothed rack.



Floor stand	1602
Base frame	feet
Adjustment of heights and depths	toothed rack, crank toothed rack, handwheel
Load if offset is 500 mm	up to kg
Weight	kg
	50
	38

## Examples how to assemble to a stand

Applying labels in direction of transport  
from the top      from the side

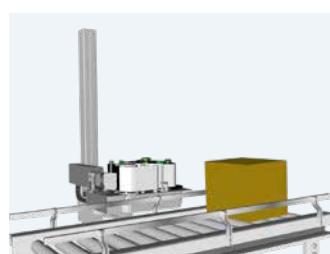


Applying labels crosswise the direction of transport  
from the top      from the side

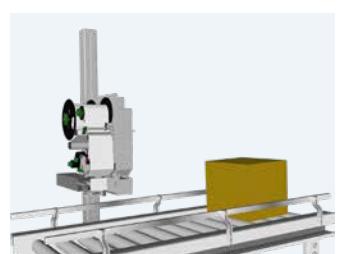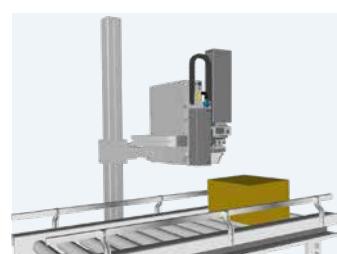

## HERMES Q floor stand

6.10

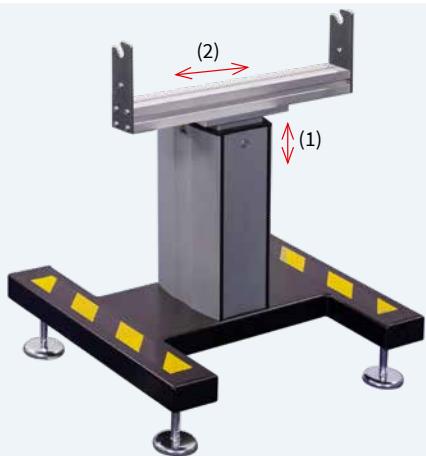

### Floor stand 1201

to assemble HERMES Q horizontally in a production line.  
The height can be adjusted continuous using an integral spindle.

A unit to regulate compressed air can be assembled to the bracket, so can a warning light.

Floor stand	1201
Feet to adjust	by mm
Load	up to kg
(1) Lower label margin-floor <sup>1)</sup>	mm
(2) Depth along direction of transport mm	± 100
Weight	approx. kg

<sup>1)</sup> further dimensions can be provided upon request



# HERMES Q delivery program

## Label printers L

Pos.	Part no.	Designation
1.1		<b>6010003</b> Label printer HERMES Q2L/300-2 <b>6010004</b> Label printer HERMES Q2L/600-2
1.2		<b>6010005</b> Label printer HERMES Q4L/300-2 <b>6010006</b> Label printer HERMES Q4L/600-2 <b>6010007</b> Label printer HERMES Q4.3L/200-2 <b>6010008</b> Label printer HERMES Q4.3L/300-2
1.3		<b>6010009</b> Label printer HERMES Q6.3L/200-2 <b>6010010</b> Label printer HERMES Q6.3L/300-2
1.1		<b>6010011</b> Label printer HERMES Q2L/300-3 <b>6010012</b> Label printer HERMES Q2L/600-3
1.2		<b>6010013</b> Label printer HERMES Q4L/300-3 <b>6010014</b> Label printer HERMES Q4L/600-3 <b>6010015</b> Label printer HERMES Q4.3L/200-3 <b>6010016</b> Label printer HERMES Q4.3L/300-3
1.3		<b>6010017</b> Label printer HERMES Q6.3L/200-3 <b>6010018</b> Label printer HERMES Q6.3L/300-3

xxxxxxxx.250 if HERMES Q provides options

## Label printers R

Pos.	Part no.	Designation
1.1		<b>6010023</b> Label printer HERMES Q2R/300-2 <b>6010024</b> Label printer HERMES Q2R/600-2
1.2		<b>6010025</b> Label printer HERMES Q4R/300-2 <b>6010026</b> Label printer HERMES Q4R/600-2 <b>6010027</b> Label printer HERMES Q4.3R/200-2 <b>6010028</b> Label printer HERMES Q4.3R/300-2
1.3		<b>6010029</b> Label printer HERMES Q6.3R/200-2 <b>6010030</b> Label printer HERMES Q6.3R/300-2
1.1		<b>6010031</b> Label printer HERMES Q2R/300-3 <b>6010032</b> Label printer HERMES Q2R/600-3
1.2		<b>6010033</b> Label printer HERMES Q4R/300-3 <b>6010034</b> Label printer HERMES Q4R/600-3 <b>6010035</b> Label printer HERMES Q4.3R/200-3 <b>6010036</b> Label printer HERMES Q4.3R/300-3
1.3		<b>6010037</b> Label printer HERMES Q6.3R/200-3 <b>6010038</b> Label printer HERMES Q6.3R/300-3

xxxxxxxx.250 if HERMES Q provides options

Scope of HERMES Q label printer delivery
HERMES Q label printer Power cable Type E+F, 1.8 m Connecting USB cable, 1.8 m Assembly instructions DE/EN

Provided online
 <a href="https://setup.cab.de/en">https://setup.cab.de/en</a> <p>Assembly instructions DE/EN/FR Configuration manuals DE/EN/FR Service manuals DE/EN Spare parts lists DE/EN Programming manual EN Windows printer drivers certified WHQL for Windows 10 Server 2016 Windows 11 Server 2019 Server 2022 Apple Mac OS X printer drivers DE/EN/FR Linux printer drivers DE/EN/FR cablabel S3 Lite software cablabel S3 Viewer Database Connector</p>



Informations are available also on the Internet:  
[www.cab.de/en/hermesq](http://www.cab.de/en/hermesq)

## Options

Pos.	Part no.	Designation
3.1		<b>6010860.250</b> Automatic ribbon saving 4L <b>6010861.250</b> Automatic ribbon saving 6L
		<b>6010862.250</b> Automatic ribbon saving 4R <b>6010863.250</b> Automatic ribbon saving 6R
3.2		<b>xxxxxxxx.486</b> UHF RFID/4/6.3 RS module <b>xxxxxxxx.488</b> UHF RFID/4/6.3 HS module
3.3		<b>6010591.***</b> Label unwinder K40/2-2 <b>6010592.***</b> Label unwinder K40/4-2 <b>6010593.***</b> Label unwinder K40/6-2 <b>6010594.***</b> Label unwinder K40/2-3 <b>6010595.***</b> Label unwinder K40/4-3 <b>6010596.***</b> Label unwinder K40/6-3
3.4		<b>5961406.***</b> Adapter 40/50
3.5		<b>5961262.***</b> Adapter 76/100
3.6		<b>6010586.***</b> Spacer Q L-2 <b>6010590.***</b> Spacer Q R-2 <b>6010905.***</b> Spacer Q L-3 <b>6010906.***</b> Spacer Q R-3
3.7		<b>5961650.***</b> Margin stop 10
3.8		<b>6010500.***</b> Cover 2L F60 <b>6010933.***</b> Cover 2L F100 <b>6010501.***</b> Cover 4L F60 <b>6010937.***</b> Cover 4L F100 <b>6010502.***</b> Cover 6L F25 <b>6010503.***</b> Cover 2R F60 <b>6010939.***</b> Cover 2R F100 <b>6010504.***</b> Cover 4R F60 <b>6010941.***</b> Cover 4R F100 <b>6010505.***</b> Cover 6R F25
3.9		<b>6010840.***</b> Print head pressure system 2L <b>6010841.***</b> Print head pressure system 4L <b>6010842.***</b> Print head pressure system 6L <b>6010843.***</b> Print head pressure system 2R <b>6010844.***</b> Print head pressure system 4R <b>6010845.***</b> Print head pressure system 6R
3.10		<b>6010557.***</b> Extended peel-off plate (+10 mm) 2L <b>6010558.***</b> Extended peel-off plate (+10 mm) 4L <b>6010559.***</b> Extended peel-off plate (+10 mm) 6L <b>6010563.***</b> Extended peel-off plate (+10 mm) 2R <b>6010564.***</b> Extended peel-off plate (+10 mm) 4R <b>6010565.***</b> Extended peel-off plate (+10 mm) 6R
3.11		<b>5954978.***</b> Print roller DRS2 <b>5954985.***</b> Print roller DRS4 <b>5954979.***</b> Print roller DRS6
3.12		<b>5961640.***</b> Antistatic brush 2L <b>5961644.***</b> Antistatic brush 4L <b>5961642.***</b> Antistatic brush 2R <b>5961646.***</b> Antistatic brush 4R
3.13		<b>5961750.***</b> Draw roller ZS2 <b>5961751.***</b> Draw roller ZS4 <b>5961752.***</b> Draw roller ZS6
3.14		<b>5591816.***</b> Interface for plugging an external label sensor
3.15		<b>6010520.***</b> 2 port Ethernet switch 10/100 Mbit/s
3.16		<b>5977487.***</b> Label sensor L, modified <b>6010498.***</b> Label sensor R, modified

xxx - .250 assembled to the printer  
.001 delivered separately

# HERMES Q delivery program


## Accessories

Pos.		Part no.	Designation
2.1		<b>5977370</b>	SD memory card
2.2		<b>5977730</b>	USB memory stick
2.3		<b>5978912</b>	USB WLAN stick 2.4 GHz 802.11b/g/n
2.4		<b>5977731</b>	USB WLAN stick including a rod antenna 2.4 GHz 802.11b/g/n + 5 GHz a/n/ac
2.6		<b>5970071</b>	Product sensor, 3 pins
2.7		<b>5964300</b>	Product sensor, 25 pins
2.8		<b>5917651</b>	I/O interface connector SUB-D, 25 pins
2.9		<b>6010560</b>	Warning light
2.10		<b>6010186</b>	External operation panel
		<b>5907718.850</b>	Connecting USB cable, 1.8 m
		<b>5907730.850</b>	Connecting USB cable, 3 m
		<b>5907750.850</b>	Connecting USB cable, 5 m
		<b>5907760.850</b>	Connecting USB cable, 11 m
		<b>5907765.850</b>	Connecting USB cable, 16 m
2.11		<b>5948205</b>	Label selection - I/O box
2.12		<b>5955710</b>	Hand switch TR2
2.13		<b>5955711</b>	Foot switch
2.14		<b>5550818</b>	Connecting RS232 C cable 9/9 pins, 3 m
2.15		upon request	Scanner CC200

## Label software

Pos.		Part no.	Designation
7.6		Bundle	cablabel S3 Lite (download on cab.de/en)
		<b>5588001</b>	cablabel S3 Pro, 1 WS
		<b>5588100</b>	cablabel S3 Pro, 5 WS
		<b>5588101</b>	cablabel S3 Pro, 10 WS
		<b>5588150</b>	cablabel S3 Pro, 1 additional licence
		<b>5588151</b>	cablabel S3 Pro, 4 additional licences
		<b>5588152</b>	cablabel S3 Pro, 9 additional licences
		<b>5588002</b>	cablabel S3 Print, 1 WS
		<b>5588105</b>	cablabel S3 Print, 5 WS
		<b>5588106</b>	cablabel S3 Print, 10 WS
		<b>5588155</b>	cablabel S3 Print, 1 additional licence
		<b>5588156</b>	cablabel S3 Print, 4 additional licences
		<b>5588157</b>	cablabel S3 Print, 9 additional licences
		in preparation	cablabel S3 Print Server
7.10		<b>9008486</b>	Programming manual EN, printed copy

## Wear parts

Pos.		Part no.	Designation
		<b>5977384.001</b>	Print head 2/300
		<b>5977385.001</b>	Print head 2/600
		<b>5977444.001</b>	Print head 4/300
		<b>5987070.001</b>	Print head 4/600
		<b>5977382.001</b>	Print head 4.3/200
		<b>5977383.001</b>	Print head 4.3/300
		<b>5977386.001</b>	Print head 6.3/200
		<b>5977387.001</b>	Print head 6.3/300
		<b>5954102.001</b>	Print roller DR2
		<b>5954180.001</b>	Print roller DR4
		<b>5954245.001</b>	Print roller DR6
		<b>5961015.001</b>	Draw roller ZR2
		<b>5961298.001</b>	Draw roller ZR4
		<b>5961220.001</b>	Draw roller ZR6

## User languages

Language	Assembly instructions	Control panel	Windows driver	Service manual	cablabel S3
<b>European Union</b>					
Bulgarian		X	X		X
Danish	X	X	X		
German	X	X	X	X	X
Estonian		X	X		
Finnish	X	X	X		
French	X	X	X		X
Greek		X	X		
English	X	X	X	X	X
Italian	X	X	X		X
Croatian		X	X		
Latvian		X	X		
Lithuanian		X	X		
Dutch	X	X	X		
Polish	X	X	X		X
Portuguese	X	X	X		
Romanian	X	X	X		
Swedish	X	X	X		
Slovak		X	X		
Slowenian	X	X	X		
Spanish	X	X	X		X
Czech	X	X	X		X
Hungarian	X	X	X		
<b>Europe (Non-EU)</b>					
Macedonian		X	X		
Norwegian		X	X		
Russian	X	X	X		X
Serbian		X	X		
Turkish		X	X		
<b>Asia</b>					
Chinese (simplified)	X	X	X		X
Chinese (traditional)	X	X	X		X
Japanese		X	X		
Korean	X	X	X		X
Thai		X	X		
<b>Middle East</b>					
Arabian		X			
Persian		X			

Scopes of delivery, design and technical specifications correspond to the date of the printing. Subject to change. The data provided in the catalog do not represent any warranty or guarantee.

# HERMES Q delivery program

## Applicators L

Pos.		Part no.	Designation	Part no.	Transfer modules	
4.1		<b>5987532</b>	Swing applicator	HQ 3214L-40	xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx	Tamp-on pad 3214L-11 F W x H Tamp-on pad, providing a damping layer 3214L-12 F W x H Tamp-on pad, providing a label stop 3214L-61 F W x H Blow-on pad 3214L-2100 W x H
4.2		<b>5987549</b> <b>5987550</b> <b>5987551</b> <b>5989352</b>	Stroke applicator	HQ 4114L-200	xxxxxxxx	Tamp-on pad 4114L-11 F W x H
		<b>5987550</b> <b>5987551</b> <b>5989352</b>	Stroke applicator	HQ 4114L-300	xxxxxxxx	Tamp-on pad, providing a damping layer 4114L-12 F W x H
		<b>5987551</b> <b>5989352</b>	Stroke applicator	HQ 4114L-400	xxxxxxxx	Tamp-on pad, providing a label stop 4114L-61 F W x H
		<b>5989352</b>	Stroke applicator	HQ 4114L-600	xxxxxxxx	Blow-on pad 4114L-2100 W x H
						Form pad 4114L-8800 W x H
4.2		<b>5987802</b> <b>5987803</b> <b>5987804</b>	Stroke applicator	HQ 4116L-200	xxxxxxxx	Tamp-on pad 4116L-11 F W x H
		<b>5987803</b> <b>5987804</b>	Stroke applicator	HQ 4116L-300	xxxxxxxx	Tamp-on pad, providing a damping layer 4116L-12 F W x H
		<b>5987804</b>	Stroke applicator	HQ 4116L-400	xxxxxxxx	Tamp-on pad, providing a label stop 4116L-61 F W x H
						Form pad 4116L-8800 W x H
4.3		<b>5987557</b> <b>5987558</b> <b>5987559</b>	Stroke turn applicator	HQ 4214L-200	xxxxxxxx	Tamp-on pad 4214L-11 F W x H
		<b>5987558</b> <b>5987559</b>	Stroke turn applicator	HQ 4214L-300	xxxxxxxx	Tamp-on pad, providing a damping layer 4214L-12 F W x H
		<b>5987559</b>	Stroke turn applicator	HQ 4214L-400	xxxxxxxx	Tamp-on pad, providing a label stop 4214L-61 F W x H
						Blow-on pad 4214L-2100 W x H
4.4		<b>5987573</b> <b>5987574</b> <b>5987575</b>	Stroke applicator	HQ 4414L-200	xxxxxxxx	Tamp-on pad 4414L-11 F W x H
		<b>5987574</b> <b>5987575</b>	Stroke applicator	HQ 4414L-300	xxxxxxxx	Tamp-on pad, providing a damping layer 4414L-12 F W x H
		<b>5987575</b>	Stroke applicator	HQ 4414L-400	xxxxxxxx	Tamp-on pad, providing a label stop 4414L-61 F W x H
4.5		<b>5987724</b> <b>5987726</b> <b>5987728</b>	Swing stroke applicator	HQ 4514L-200	xxxxxxxx	Blow-on pad
		<b>5987726</b> <b>5987728</b>	Swing stroke applicator	HQ 4514L-300		
		<b>5987728</b>	Swing stroke applicator	HQ 4514L-400		
4.6		<b>5987548</b>	Flag applicator	HQ 4712L-300	xxxxxxxx	Form pad ..... W x H
4.7		<b>5987520</b> <b>5987521</b> <b>5987522</b> <b>5989343</b>	Front side applicator	HQ 3014L-200	xxxxxxxx	Tamp-on pad 3014L-1100 W x H
		<b>5987521</b> <b>5987522</b>	Front side applicator	HQ 3014L-300	xxxxxxxx	Tamp-on pad, spring-mounted 3014L-3100 W x H
		<b>5987522</b> <b>5989343</b>	Front side applicator	HQ 3014L-400	xxxxxxxx	Blow-on pad 3014L-2100 W x H
		<b>5987523</b> <b>5987524</b> <b>5987525</b> <b>5989346</b>	Front side applicator	HQ 3016L-200	xxxxxxxx	Tamp-on pad 3016L-1100 W x H
		<b>5987524</b> <b>5987525</b>	Front side applicator	HQ 3016L-300	xxxxxxxx	Tamp-on pad, spring-mounted 3016L-3100 W x H
		<b>5987525</b> <b>5989346</b>	Front side applicator	HQ 3016L-400		
		<b>5987526</b> <b>5989346</b>	Front side applicator	HQ 3016L-600		
4.8		<b>5987534</b> <b>5987535</b> <b>5987536</b> <b>5987537</b>	Stroke applicator	HQ 4014L-200	<b>5966147</b>	Universal pad 4014L-1100 75 x 60
		<b>5987535</b> <b>5987536</b>	Stroke applicator	HQ 4014L-300	<b>5966148</b>	Universal pad 4014L-1100 90 x 90
		<b>5987536</b> <b>5987537</b>	Stroke applicator	HQ 4014L-400	<b>5966149</b>	Universal pad, spring-mounted 4014L-3100 116 x 102
		<b>5987537</b>	Stroke applicator	HQ 4014L-600	<b>5966150</b>	Universal pad, spring-mounted 4014L-3100 116 x 152
					xxxxxxxx	Tamp-on pad 4014L-11 F W x H
					xxxxxxxx	Blow-on pad 4014L-2100 W x H
					xxxxxxxx	Tamp-on pad, spring-mounted 4014L-3100 W x H
					xxxxxxxx	Roll-on pad 4014L-4100 W x H
					xxxxxxxx	Corner-wrap pad 4014L-5100 W x H / H
		<b>5987541</b> <b>5987542</b> <b>5987543</b> <b>5989344</b>	Stroke applicator	HQ 4016L-200	xxxxxxxx	Tamp-on pad 4016R-11 F W x H
		<b>5987542</b> <b>5989344</b>	Stroke applicator	HQ 4016L-300	xxxxxxxx	Tamp-on pad, spring-mounted 4016R-3100 W x H
		<b>5987543</b> <b>5989344</b>	Stroke applicator	HQ 4016L-400	xxxxxxxx	Roll-on pad 4016R-4100 W x H
		<b>5987544</b>	Stroke applicator	HQ 4016L-600		
4.9		<b>5989285</b> <b>5989286</b> <b>5989287</b> <b>5989288</b>	Stroke applicator	HQ 4024L-200	<b>5989301</b>	Tamp-on pad, spring-mounted 4024-3000 105 x 100
		<b>5989286</b> <b>5989287</b>	Stroke applicator	HQ 4024L-300	<b>5989302</b>	Tamp-on pad, spring-mounted 4024-3000 105 x 150
		<b>5989287</b> <b>5989288</b>	Stroke applicator	HQ 4024L-400	<b>5989303</b>	Tamp-on pad, spring-mounted 4024-3000 105 x 200
4.10		<b>5987736</b> <b>5987738</b> <b>5987740</b>	Stroke blow applicator	HQ 4614L-200	xxxxxxxx	Blow-on pad 4614L-2100 W x H
		<b>5987738</b> <b>5987740</b>	Stroke blow applicator	HQ 4614L-300		
		<b>5987740</b>	Stroke blow applicator	HQ 4614L-400		
4.11		<b>6010890</b> <b>5966144</b> <b>5966146</b>	Demand module	HQ 5112L		
		<b>5966144</b> <b>5966146</b>	Demand module	HQ 5114L		
		<b>5966146</b>	Demand module	HQ 5116L		
4.12		<b>5972870</b> <b>5987552</b> <b>5989291</b> <b>5989292</b>	Vacuum belt applicator	HQ 5314L-2		
		<b>5987552</b> <b>5989291</b>	Vacuum belt applicator	HQ 5314L-3		
		<b>5989291</b> <b>5989292</b>	Vacuum belt applicator	HQ 5314L-4		
		<b>5989292</b>	Vacuum belt applicator	HQ 5316L-2		
		<b>5987710</b> <b>5989293</b>	Vacuum belt applicator	HQ 5316L-3		
		<b>5989293</b>	Vacuum belt applicator	HQ 5316L-4		
4.13		<b>5987714</b> <b>5989294</b> <b>5987718</b> <b>5987720</b>	Vacuum belt applicator	HQ 5414L-3		
		<b>5989294</b> <b>5987718</b>	Vacuum belt applicator	HQ 5414L-4		
		<b>5987718</b> <b>5987720</b>	Vacuum belt applicator	HQ 5416L-3		
		<b>5987720</b>	Vacuum belt applicator	HQ 5416L-4		
4.14		<b>6011850</b>	Demand table	HQ 5714L-100		
4.15		<b>5987564</b>	Air jet box 5 templates are included	HQ 6114L	<b>5984709.001</b>	Template 5 items are included in a pack unit 6114 L/R

xxxxxxxx - customer-specific part no. subsequent to request

# HERMES Q delivery program

## Applicators R

Pos.	Part no.	Designation	Part no.	Transfer modules
4.1		<b>5987533</b> Swing applicator	HQ3214R-40	xxxxxxxxx Tamp-on pad 3214R-11 F W x H xxxxxxxxx Tamp-on pad, providing a damping layer 3214R-12 F W x H xxxxxxxxx Tamp-on pad, providing a label stop 3214R-61 F W x H xxxxxxxxx Blow-on pad 3214R-2100 W x H
4.2		<b>5987553</b> Stroke applicator <b>5987554</b> Stroke applicator <b>5987555</b> Stroke applicator <b>5989353</b> Stroke applicator	HQ 4114R-200 HQ 4114R-300 HQ 4114R-400 HQ 4114R-600	xxxxxxxxx Tamp-on pad 4114R-11 F W x H xxxxxxxxx Tamp-on pad, providing a damping layer 4114R-12 F W x H xxxxxxxxx Tamp-on pad, providing a label stop 4114R-61 F W x H xxxxxxxxx Blow-on pad 4114R-2100 W x H xxxxxxxxx Form pad 4114R-8800 W x H
4.2		<b>5987812</b> Stroke applicator <b>5987813</b> Stroke applicator <b>5987814</b> Stroke applicator	HQ 4116R-200 HQ 4116R-300 HQ 4116R-400	xxxxxxxxx Tamp-on pad 4116R-11 F W x H xxxxxxxxx Tamp-on pad, providing a damping layer 4116R-12 F W x H xxxxxxxxx Tamp-on pad, providing a label stop 4116R-61 F W x H xxxxxxxxx Form pad 4116R-8800 W x H
4.3		<b>5987561</b> Stroke turn applicator <b>5987562</b> Stroke turn applicator <b>5987563</b> Stroke turn applicator	HQ 4214R-200 HQ 4214R-300 HQ 4214R-400	xxxxxxxxx Tamp-on pad 4214R-11 F W x H xxxxxxxxx Tamp-on pad, providing a damping layer 4214R-12 F W x H xxxxxxxxx Tamp-on pad, providing a label stop 4214R-61 F W x H xxxxxxxxx Blow-on pad 4214R-2100 W x H
4.4		<b>5987577</b> Stroke applicator <b>5987578</b> Stroke applicator <b>5987579</b> Stroke applicator	HQ 4414R-200 HQ 4414R-300 HQ 4414R-400	xxxxxxxxx Tamp-on pad 4414R-11 F W x H xxxxxxxxx Tamp-on pad, providing a damping layer 4414R-12 F W x H xxxxxxxxx Tamp-on pad, providing a label stop 4414R-61 F W x H
4.5		<b>5987730</b> Swing stroke applicator <b>5987732</b> Swing stroke applicator <b>5987734</b> Swing stroke applicator	HQ 4514R-200 HQ 4514R-300 HQ 4514R-400	xxxxxxxxx Blow-on pad 4514R-2100 W x H
4.7		<b>5987526</b> Front side applicator <b>5987527</b> Front side applicator <b>5987528</b> Front side applicator <b>5989354</b> Front side applicator	HQ 3014R-200 HQ 3014R-300 HQ 3014R-400 HQ 3014R-600	xxxxxxxxx Tamp-on pad 3014R-1100 W x H xxxxxxxxx Tamp-on pad, spring-mounted 3014R-3100 W x H xxxxxxxxx Blow-on pad 3014R-2100 W x H
4.7		<b>5987529</b> Front side applicator <b>5987530</b> Front side applicator <b>5987531</b> Front side applicator <b>5989355</b> Front side applicator	HQ 3016R-200 HQ 3016R-300 HQ 3016R-400 HQ 3016R-600	xxxxxxxxx Tamp-on pad 3016R-1100 W x H xxxxxxxxx Tamp-on pad, spring-mounted 3016R-3100 W x H
4.8		<b>5987538</b> Stroke applicator <b>5987539</b> Stroke applicator <b>5987540</b> Stroke applicator <b>5989363</b> Stroke applicator	HQ 4014R-200 HQ 4014R-300 HQ 4014R-400 HQ 4014R-600	<b>5966140</b> Universal pad 4014R-1100 75 x 60 <b>5966141</b> Universal pad 4014R-1100 90 x 90 <b>5966142</b> Universal pad, spring-mounted 4014R-3100 116 x 102 <b>5966143</b> Universal pad, spring-mounted 4014R-3100 116 x 152
4.8		<b>5987545</b> Stroke applicator <b>5987546</b> Stroke applicator <b>5987547</b> Stroke applicator <b>5989356</b> Stroke applicator	HQ 4016R-200 HQ 4016R-300 HQ 4016R-400 HQ 4016R-600	xxxxxxxxx Tamp-on pad 4014R-11 F W x H xxxxxxxxx Blow-on pad 4014R-2100 W x H xxxxxxxxx Tamp-on pad, spring-mounted 4014R-3100 W x H xxxxxxxxx Roll-on pad 4014R-4100 W x H xxxxxxxxx Corner-wrap pad 4014R-5100 W x H / H
4.9		<b>5989295</b> Stroke applicator <b>5989296</b> Stroke applicator <b>5989297</b> Stroke applicator <b>5989298</b> Stroke applicator	HQ 4024R-200 HQ 4024R-300 HQ 4024R-400 HQ 4024R-600	<b>5989301</b> Tamp-on pad, spring-mounted 4024-3000 105 x 100 <b>5989302</b> Tamp-on pad, spring-mounted 4024-3000 105 x 150 <b>5989303</b> Tamp-on pad, spring-mounted 4024-3000 105 x 200
4.10		<b>5987742</b> Stroke blow applicator <b>5987744</b> Stroke blow applicator <b>5987746</b> Stroke blow applicator	HQ 4614R-200 HQ 4614R-300 HQ 4614R-400	xxxxxxxxx Blow-on pad 4614R-2100 W x H
4.11		<b>6010910</b> Demand module <b>5966145</b> Demand module <b>5966152</b> Demand module	HQ 5112R HQ 5114R HQ 5116R	
4.12		<b>5987708</b> Vacuum belt applicator <b>5987556</b> Vacuum belt applicator <b>5989357</b> Vacuum belt applicator <b>5989358</b> Vacuum belt applicator	HQ 5314R-2 HQ 5314R-3 HQ 5314R-4	
4.12		<b>5987712</b> Vacuum belt applicator <b>5989359</b> Vacuum belt applicator	HQ 5316R-2 HQ 5316R-3 HQ 5316R-4	
4.13		<b>5987716</b> Vacuum belt applicator <b>5989360</b> Vacuum belt applicator <b>5987722</b> Vacuum belt applicator <b>5989361</b> Vacuum belt applicator	HQ 5414R-3 HQ 5414R-4 HQ 5416R-3 HQ 5416R-4	
4.15		<b>5987565</b> Air jet box 5 templates are included	HQ 6114R	<b>5984709.001</b> Template 5 items are included in a pack unit 6114 L/R

xxxxxxxxx - customer-specific part no. subsequent to request

## Accessories provided for applicators

Pos.		Part no.	Designation
5.13		<b>5964277.001</b> <b>5964095.001</b> <b>5964614.001</b>	Blow tube 2" Blow tube 4" Blow tube 6"
5.14		<b>6010880</b> <b>6010881</b>	Unit L to regulate compressed air Unit R to regulate compressed air
5.16		<b>5984805</b> <b>5984795</b>	Unit L to regulate compressed air, providing a shut-off valve Unit R to regulate compressed air, providing a shut-off valve


## Options provided for applicators

Pos.		Part no.	Designation
5.17		<b>xxxxxx.212</b>	Pressure-reducing valve
		xxxxxx - applicator part no.	
5.18		<b>xxxxxx.220</b>	Pressure-reduced applicator suitable for HQ 4014, HQ 4114, HQ 4414, HQ 4214 / 300 stroke
		xxxxxx - applicator part no.	

## Tools for assembly

Pos.		Part no.	Designation
6.1		<b>5965940</b>	Adapter plate
6.2		<b>5958365</b> <b>5965929</b> <b>5971136</b> <b>5987701</b> <b>5987702</b> <b>5987703</b>	Profile 40 Profile 80 Profile 120 Profile 160 Profile 200 Profile 300
6.3		<b>5961203</b>	Base plate 500 x 255 mm
6.4		<b>5989277</b>	Base plate with XY Stop and product sensor
6.5		<b>5955685</b>	Bracket
6.6		<b>8914443</b>	Clamped joint designed for a 50 x 50 mm profile
6.7		<b>8914444</b>	Flanged joint designed for a 50 x 50 mm profile

## Floor stands

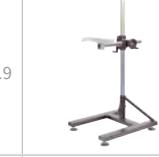Pos.		Part no.	Designation
6.8		<b>5970113</b>	Floor stand 1601
6.9		<b>5970112</b>	Floor stand 1602
6.10		<b>5972515</b>	Floor stand 1201

# Overview of cab products



Germany  
**cab Produkttechnik GmbH & Co KG**  
Karlsruhe  
Phone +49 721 6626 0  
[www.cab.de](http://www.cab.de)

France  
**cab Technologies S.à.r.l.**  
Niedermosel  
Phone +33 388 722501  
[www.cab.de/fr](http://www.cab.de/fr)

USA  
**cab Technology, Inc.**  
Chelmsford, MA  
Phone +1 978 250 8321  
[www.cab.de/us](http://www.cab.de/us)

Mexico  
**cab Technology, Inc.**  
Juárez  
Phone +52 656 682 4301  
[www.cab.de/es](http://www.cab.de/es)

Taiwan  
**cab Technology Co., Ltd.**  
Taipei  
Phone +886 (02) 8227 3966  
[www.cab.de/tw](http://www.cab.de/tw)

China  
**cab (Shanghai) Trading Co., Ltd.**  
Shanghai  
Phone +86 (021) 6236 3161  
[www.cab.de/cn](http://www.cab.de/cn)

Singapore  
**cab Singapore Pte. Ltd.**  
Singapore  
Phone +65 6931 9099  
[www.cab.de/en](http://www.cab.de/en)

South Africa  
**cab Technology (Pty) Ltd.**  
Randburg  
Phone +27 11 886 3580  
[www.cab.de/za](http://www.cab.de/za)

**cab // 820** distribution and service partners in more than **80** countries